



GS/PANTHER DS

OPERATING MANUAL

saelen.fr ts-industrie.eu

SAELEN[®] TS INDUSTRIE[®]

TABLE OF CONTENT	
Declaration of conformity	4
Attention	5
Guaranties	6
Brevet d'invention	7
Preface	8
Location of the serial number	9
Safety instructions	10 - 12
Pictographs	13 - 15
Safe transport	16
General description and functions	17 - 19
Operation	20
Coupling the machine to a vehicle	21
Checks prior to initial start-up of the machine	21
Operation	22
Material infeed and operation	23
Shut-down	24
Biodegradable lubricants for reducing environmental pollution	25
Lubricant, filling quantity	26
Engine maintenance intervals	27
Lubricating points	28 - 29
Oil levels	30
Adjusting the tension of the conveyor belt	31
Check condition of conveyor belt and sliding plate	32
Vent openings under the rotor	32
Knife and insert replacement	33 - 34
Check counter-knife	35
Tensioning the V-belt of the rotor drive	36
Tensioning the drive belt chain for the infeed roller	37
Maintenance of hydraulic coupling	38
Brake adjustment	39
Control element of the engine	40
PILOT SYSTEM	41 - 50
Tanks	51
Hood and expulsion channel safeguard	52
Emergency stop switches	53
Proximity sensor and fuse	54
CO2 Reduction system	55 - 58
Expulsion channel	59
Troubleshooting	60 - 61
Specifications	62
Hydraulic connections	63
Hydraulic circuit diagram	64
Electric circuit diagram engine	65 - 66
Electric circuit diagram machine	67
Electric circuit CO2 Reduction	68

DECLARATION OF CONFORMITY

LA SOCIETE **TS industrie**

Weserstrasse 2
47506 NEUKIRCHEN-VLUYN

Tél : +49(0)2845 9292-0 - Fax : +49(0)2845 9292-28

HEREBY DECLARE THAT THE MACHINE:

Trade Name: **TS Industrie**

Type : **GS/PANTHERDS**

Engine performance: **41,20 kW**

Technical documentation held by Mathieu Willerval.


is in conformity with the following European Directives:

- **2006/42/EC** Directive „Machinery“
- **2014/30/EU** Directive „Electromagnetic compatibility“
- **2016/1628** Directive „Emissions“
- **2000/14/EC** Directive „Noise emissions“

Conformity evaluation procedure concerning directive 2000/14/CE Annex V.

<i>Power at 2600 rpm</i>	<i>Measured sound pressure level</i>	<i>Guaranteed sound pressure level (EVA)</i>
41,20 Kw	124 dBA	126 dBA

RONCHIN, December 14, 2019

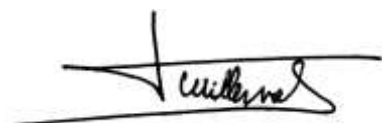

Mathieu Willerval (Production Manager TS Industrie)

SÆLEN TS INDUSTRIE®



Attention!

Before our machines are delivered they pass a tight quality control in the works.

Given that we no longer have a bearing on the machine after it leaves the works, the dealer has to perform another check before the delivery to the end customer.

The following is to be checked:

- Exterior damages produced by transport etc.
- Tight seat of all screw and hose connections
- Filling level of oil, water and fuel
- Complete functional control of all parts

This control is to be confirmed with stamp and signature on the **Machine Delivery Document**. If the fully completed and signed delivery document is not returned there is no right for warranty!

Furthermore, it is required to check all screw connections for tight seat and the laid hoses for marks of abrasion!

Agree a date for this directly with your customer.

Regular inspections according to the operating manual are to be met!

Controlled quality – an important step towards customer satisfaction!
Play your part!

It is strictly forbidden to use the machine if emergency stops, cables, or any other safety device or control device are damaged or not present

Guarantees

Processing of warranty claims

Warranty claims according to the General Business Terms of the manufacturer are valid for the period of 1 year starting with the day of delivery.

Determinative for the moment of the transfer of risk is the date written in the **Machine Delivery Document**. As a matter of principle, warranty claims are to be announced to the supplying franchised dealer. For the preservation of evidence, all parts of the delivered machine covered by this have always to be stored unchanged until the final processing of the warranty claim brought to notice.

Technical modification at machines and/or parts thereof will result in loss of any and all right of warranty claims. The same is applicable in case of inappropriate treatment or use of lubricants and spare parts or accessories not approved by the manufacturer. Transport damages and damages caused by usual wear after commissioning of the machine do not create any warranty claims.

The delivered machine has to be subjected to the obligatory check and inspection intervals specified in the enclosed maintenance schedule. If the obligatory visual check and inspections schedule is not complied with, any and all warranty claims become void. Another requirement for a valid warranty claim is the presentation of a complete proof about the executed obligatory visual checks and inspections.

All warranty and maintenance works are only allowed to be carried out by a specialist dealer authorised by **TS Industrie**.

It is pointed out that warranty works exceeding an amount of 150.00 € is unconditionally to be agreed with **TS Industrie** and authorised by **TS Industrie**. In this case, the manufacturer reserves the right that he carries out the repair.

Prerequisite for the assertion of a warranty claim is the return of the fully completed and signed Machine Delivery Document.



Modifications on the equipment and programming of the electronic system are prohibited because these might have a negative effect on the operational safety and life time of the machine.

**DO NOT FORGET TO REGISTER THE WARRANTY,
OTHERWISE IT WILL BECOME VOID**

**www.ts-industrie.eu
Section: Services / Warranty**



BREVET D'INVENTION

Code de la propriété intellectuelle-Livres VI

DECISION DE DELIVRANCE

Le Directeur général de l'Institut national de la propriété industrielle décide que le brevet d'invention n° 00 00 00 00 dont le texte est ci-annexé est délivré à : **SAELEN S.N.S. Société anonyme - FR**

La délivrance produit ses effets pour une période de vingt ans à compter de la date de dépôt de la demande, sous réserve du paiement des redevances annuelles.

PATENT FOR INVENTION

Intellectual property law-Books VI

GRANTING DECISION

The General Manager of the National Institute of industrial property has decided that invention patent # ##-#### the text of which is appended shall be delivered to: **SAELEN S.N.S. Company - FR**

The delivery produces its effects for a period of twenty years starting on the date of deposit of the application, under reserve of payment of the annual royalties.

Mention of the delivery is made in the Official Bulletin of industrial property ####/## of ##:##:## (publication # # ### ##).

Le Directeur général de l'Institut
national de la propriété industrielle

D. HANGARD

INSTITUT
NATIONAL DE
LA PROPRIETE
INDUSTRIELLE

SIEGE

26 bis, rue de Saint Petersburg
75000 PARIS cedex 08
Téléphone : 01 53 04 53 04
Télécopie : 01 42 93 59 30

ETABLISSEMENT PUBLIC NATIONAL

ORGE PAR LA LOI N° 51-444 DU 19 AVRIL 1951

SAELEN TS INDUSTRIE

Preface

We thank you very much for deciding to purchase an universal chipper from **TS Industrie**. Your universal chipper was manufactured with utmost care and high quality standards. In order to meet these requirements also for the mostly professional applications, we kindly ask you to diligently read this operating manual and to comply especially with the warning and maintenance information.

Only if complying with all maintenance works within the specified maintenance intervals we can concede the full manufacturer's warranty for your universal chipper from **TS Industrie**.

The operating manual includes several models such that in the introduction is explained how to orient yourself with the help of small pictographs.




Location of the serial number

For any spare parts order or a question regarding technical information have always the serial number of your **PANTHERDS** at hand.

Manufacturer's type plate

Do not state the number from the type plate of the trailer.

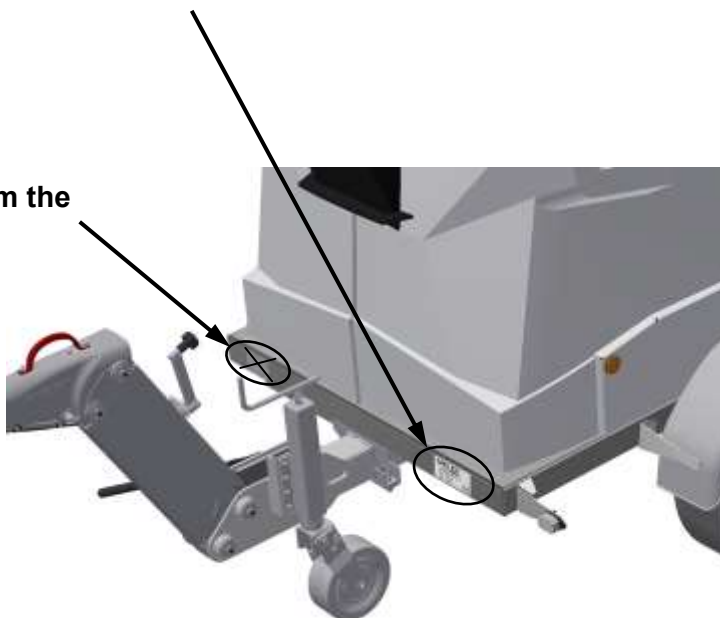

The serial number is located as shown in the image. It does always have **five- or six-digit number**.

Serial number



Safety instructions

- 1.** The machine is only allowed to be used according to the operating manual!
- 2.** In case of machines with engine also the operating instructions of the engine are to be observed.
- 3.** Folding the intake extension up (as far as present) is only allowed after standstill of the rotor.
- 4.** Maintenance, cleaning and setting works as well as the removal of protective devices are only allowed after the engine is shut down, the ignition switched off, the drive decoupled and the tools immobile. Remove the ignition key such that unintended start is impossible.
- 5.** Prior to operation it is required to remove foreign matters, e.g. ferrous parts, stones etc.
- 6.** After maintenance or repair it is to be checked if all protective devices are mounted.
- 7.** The wood chipper is not allowed to be operated in closed spaces because of the risk of intoxication.
- 8.** The rotor must not be uncovered before it has reached standstill. That is to say, the propulsion engine (tractor) is parked and the ignition is in 0-position.
- 9.** The machine operator is responsible that no third persons are staying in the working and danger area.
- 10.** For repairs it is to be observed to use approved original spare parts only.
- 11.** Only persons of over 18 years are allowed to operate the wood chipper.
- 12.** Safety shoes and tight fitting clothes, work gloves with tight gauntlets as well as ear protection and goggles are to be used.

13. For transporting the wood chipper it must be moved into transport position.
A) Fold the hopper (as far as present) up and check if the locking device is engaged.
B) Move the wood chipper into transport position and check if the safety pin has engaged.
C) Turn the ejection channel such that it does not jut laterally out over the machine.
D) If necessary lift all parking sustainers.

14. When driving on public roads the lighting must correspond to the Highway Code.

15. For work, the wood chipper must be parked stable.

16.
a) Single-axle machines with engine are attached to tractor vehicles, and the parking brake is applied as far as present.
In case of machines without brakes it is required to push the supplied chocks under the wheels.
b) For operation without tractor vehicle it is required to lower the parking sustainers (front and rear).

17. For safety reasons a minimum distance of 10 metres should be kept from the machine. **The expulsion must always be directed away from the operating personnel.**


18. Only after the engine is shut off and the rotor is standing still, it is allowed to reach with the hands into the feed mouth.

19. The admissible hydraulic operating pressure set ex works is not allowed to be changed.

20. Only trunks up to a diameter of **19 cm** are allowed to be processed.

21. The hydraulic system is to be competently checked every year. The hydraulic hoses are to be replaced after 5 years.

22. During feed of the wood chipper do not reach into the feed hopper. Congestions are to be removed in a safe manner (shut the engine down, use an aid). For pushing in short pieces or shrubby material do only use solid wooden rods or other aids made of wood. Our wood chippers are designed only for manual feed. Do not use mechanical resources (gripper) for feeding the machine.
Do not move in the area of the expulsion.

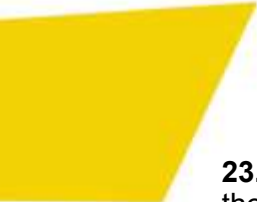

23. Carry out an functional check every day before starting the machine, especially of the safety equipment (**trailer coupling**, gear linkage, shifting block, cut-off switch on the hoods in case of the M version etc.). Chipping knives and counter-knives are also to be checked for proper functioning and tight seat.

24. Prior to starting the machine the operator must be trained in detail.

25. The rotor must not be uncovered before standstill and the engine is switched off.

26. Danger because of flying off pieces. It is to be observed that also in the operating range pieces such as wood chips might fly out of the hopper area. Body protection is always to be used. Operation is to be carried out lateral of the hopper.

27. Note for all machines with engine:

The inclination of the engine during operation (driving) must amount to max. 25°. In case of reduced oil level the lubrication of the engine is not ensured even at 25°!

28. Caution when parking the machine on a slope. The machine operator has to ensure that the machine is safely stationed for the time of the work.

29. **After connecting the machine to the tractor vehicle, remove and store the support wheel.**

30. The machine must only be fed with wood. Ensure that no stones or metal objects enter the machine.

31. The machine must not be used for transporting material or persons.

32. The machine must not be used for pushing or towing.

33. Battery acid is a caustic fluid. Therefore any contact with eyes, skin and clothes must be avoided. In case of contact rinse all affected areas with water and go see a doctor, if required.

34. Always disconnect the battery before any work on the electric installation.

35. Only **trained personnel** is authorised to carry out these works. The execution of all installation and removal works as well as special maintenance works is reserved for an authorised specialist dealer.

36. Pay attention that you are not drawn into the infeed roller with the clothes.

37. Regularly clean the lateral skirt such that it remains transparent.

Pidographs

Wear eye and ear protection!



Use protective gloves with specially tight gauntlets!



Wear safety shoes!



Do only touch machine parts after they are at a complete standstill!



Keep sufficient distance to rotating machine parts!



Pictographs

While the drive is running never open and remove protective devices!



Read the operating manual before start-up!



Do not stay in the area of the expulsion if the machine is running! Hazard area!



Shut down the engine and remove the key prior to any maintenance and repair work!



Caution! Entanglement.

Never reach into the infeed hopper while the engine is running.




Fill the fuel tank with **diesel**.




The machine is operated with hydraulic oil HV46.

HYDRAULIC

Lubrication points

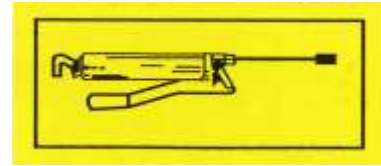

The sound level of the working machine is not the value of the standard level on the sticker.

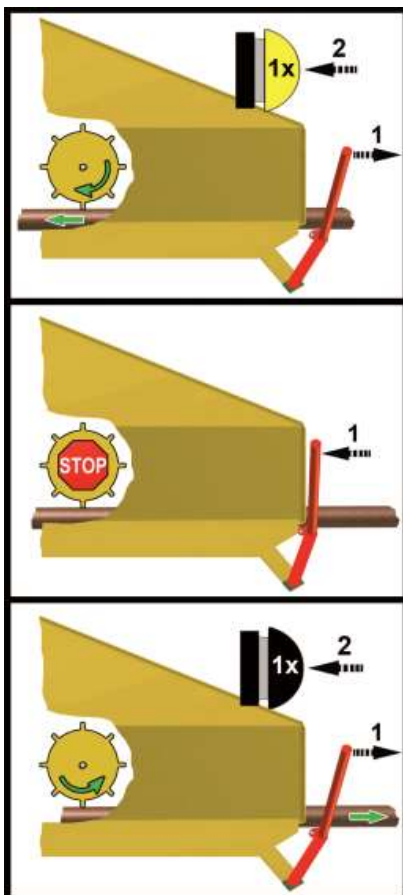

Moving direction commands for the conveyor belt

Material chipping (forward **max. speed**)

Stopping rotation of the infeed rollers

Loosening material (backwards)



SAELEN TS INDUSTRIE®

Safe transport

- 1) Observe the valid Highway Code.
- 2) Ensure that the machine is always fitted with signal lights, which are clean and visible for other road users.
- 3) Reduce speed when driving on rural roads and unlevel routes.
- 4) Remove all remaining material from the hopper.
- 5) Turn the expulsion chimney completely to the front and fold the expulsion hatch completely down.



Coupling wear indication:

Check the wear indication each time the machine is hooked up to the tractor vehicle. Acquire the habit to replace the coupling dog and / or coupling ball of the vehicle as soon as the wear indication hits the negative area, such that you cannot loose the chipper when driving on rough roads or driving against a kerb when reversing.

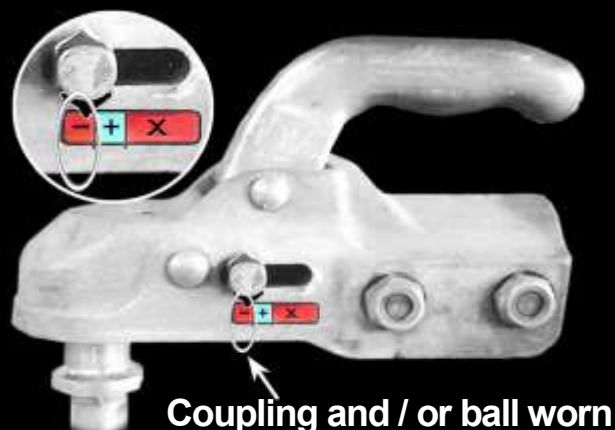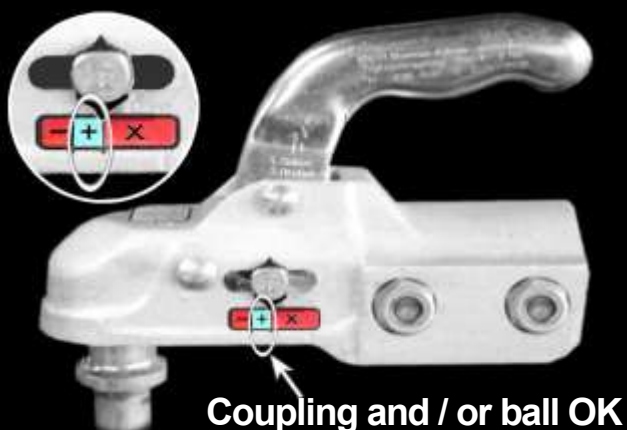

Coupling to a vehicle:

The chipper should always be coupled in horizontal position such that the machine is prevented from tilting backwards **AND** check every day that the drawbar adjusting devices are secured to prevent jerky movements, which damage coupling and towing device and reduce the life span.

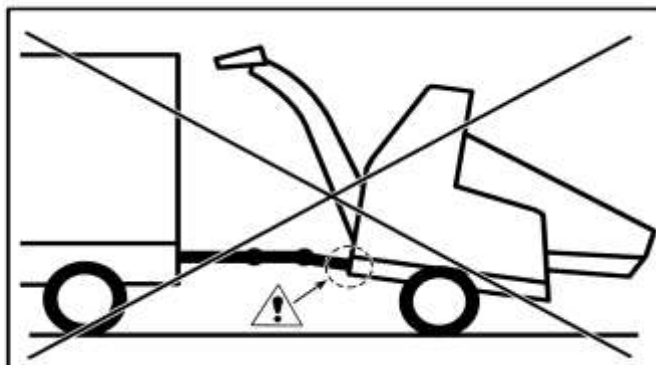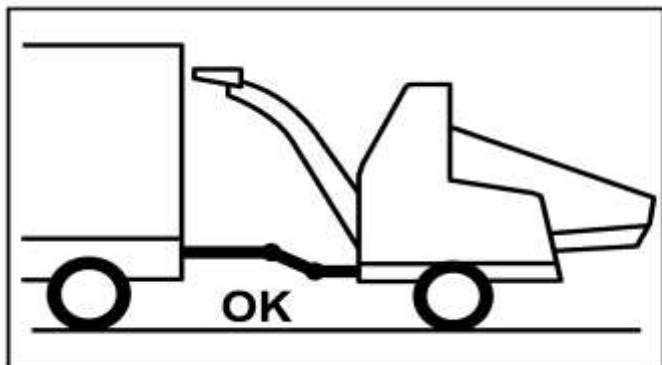


General description and functions

DESCRIPTION OF THE MACHINE

The chipper **PANTHER TS Industrie** is designed for chipping branches up to a **diameter of 7,48 inches** (19cm).

The machine consists of the following main components:

- (A) : Frame
- (B) : Chipping unit
- (C) : Engine and drives
- (D) : Expulsion chimney
- (E) : Noise insulation hoods

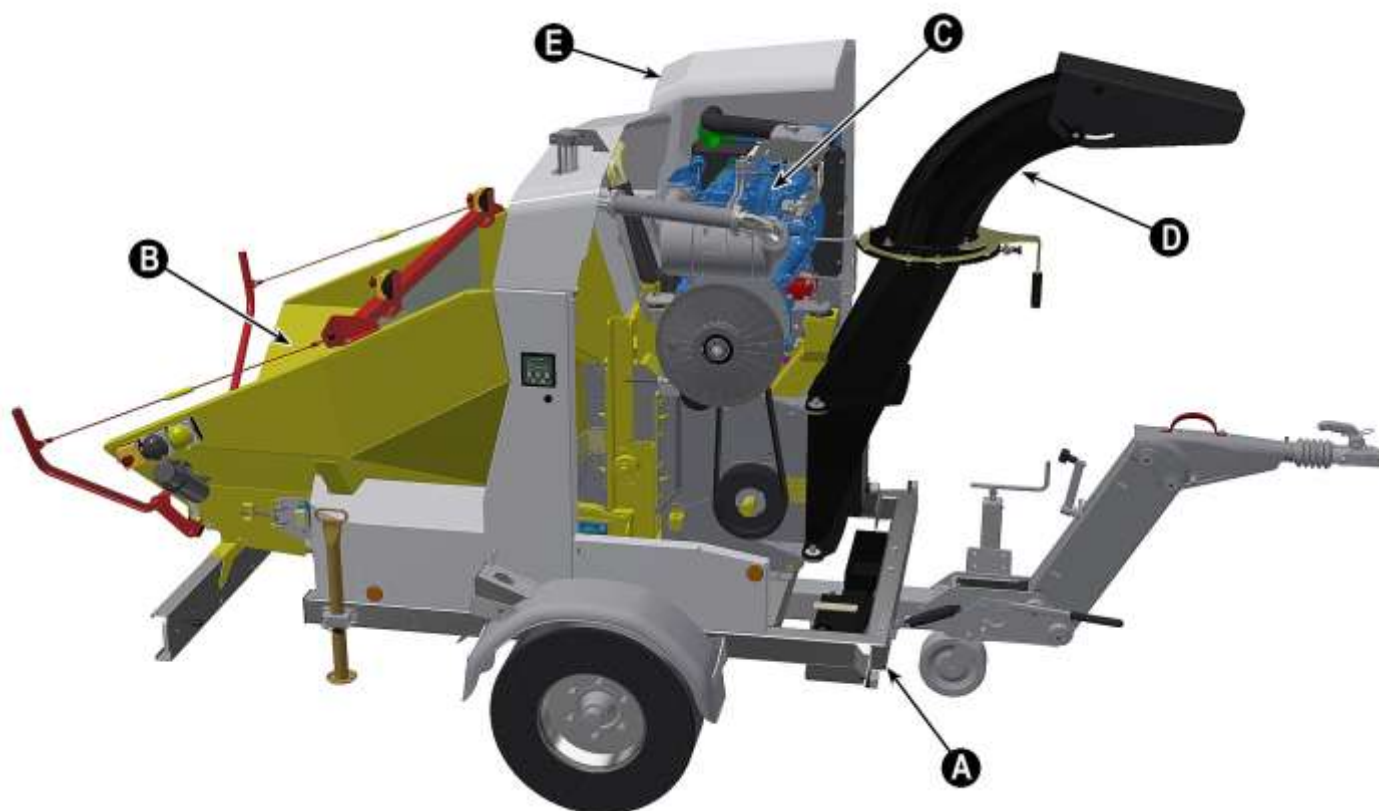

General description and functions

A. Frame

The frame is used for allocating the different components of the chipper **PANTHER** and allows an independent movement of the machine.

B. Chipping unit


The unit consists of one infeed hopper (1), one conveyor belt (2), one infeed roller (3) and one rotor.

Conveyor belt and infeed roller:

They transport the chipping material at constant speed in direction rotor. An anti-blocking system disconnects the infeed if the speed of the rotor falls below the minimum speed (chipping unit jammed) and automatically connects again after the speed of the rotor is sufficient for correct chipping work.

The infeed can turn into both directions (forward and backwards) when using the yellow and the black button (4) located on the left side of the infeed hopper

The speed of rotation can be matched to the diameter of the material to be chipped using the regulating screw (4) on the left side of the rear hood.

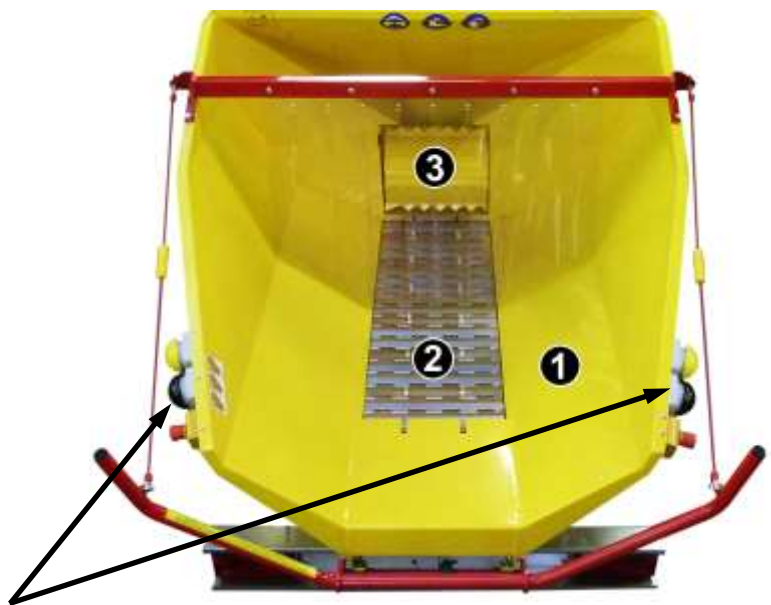

Rotor:

The rotor is the main component of the machine and has the task to chip the material coming from the infeed roller. After the engine accelerates, the rotor connects and rotates at a constant speed.



SAELEN TS INDUSTRIE®

General description and functions

C. Engine and drives

The diesel engine is located above the chipping unit. It supplies the required energy for the drive of the rotor and the hydraulic oil pump **(1)**.

The machine is driven by a 4-cylinder diesel engine with an output of 56 HP at 2600 rpm. Further information regarding the engine can be taken from the manual of the manufacturer.

The rotor is driven via the output shaft, the centrifugal clutch with belt pulley **(2)** and 4 V-belts. The hydraulic pump is connected to the diesel engine and drives the hydraulic motors of the infeed rollers.



D. Expulsion channel


This expulsion channel expulses the chipped material. The upper part can be swivelled by 180° in horizontale position. The expulsion hatch can be adjusted in vertical position.



Caution:

When connecting the wood chipper residual chips can be expulsed.

Two electric switches disconnects the engine and prevents a restart if the expulsion chimney is open towards the rotor.

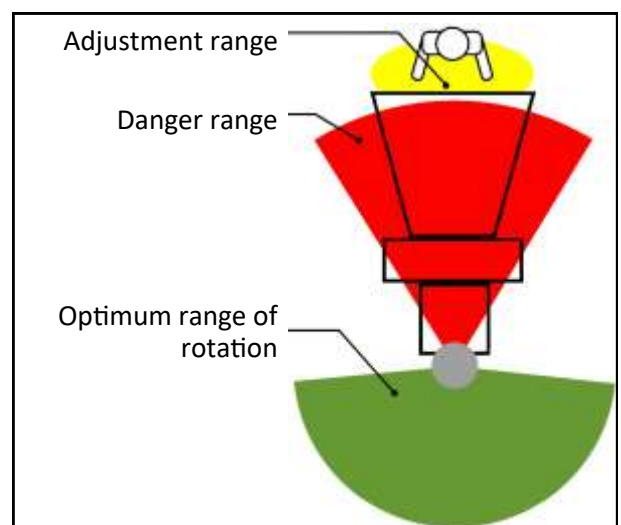

E. Hood

Different hoods protect against rotating parts making work safe.

Two electric switch disconnects the engine and prevents a restart when opening the hoods.

MATERIAL INFEED

The **PANTHER** is fitted with an electrically controlled hydraulic distributor, which is activated with two buttons at the rear of the infeed hopper for running forwards and backwards, and with a red control rod for disconnection of the in-feed roller and the conveyor belt.

Note: The engine has to run at max. speed for making the conveyor belt and the infeed roller turn.

FORWARDS MODE:

1. Move the red control rod back such that the infeed roller moves to forward motion.
2. Push the **yellow** button to make the roller move forwards.


STOP THE INFEED:

1. Push the red control rod to make the infeed stop.

BACKWARDS MODE:

1. Move the red control rod back
2. Push the **black** button.

NOTE: The infeed can be switched directly from forwards to backwards and vice versa without operating the control rod.

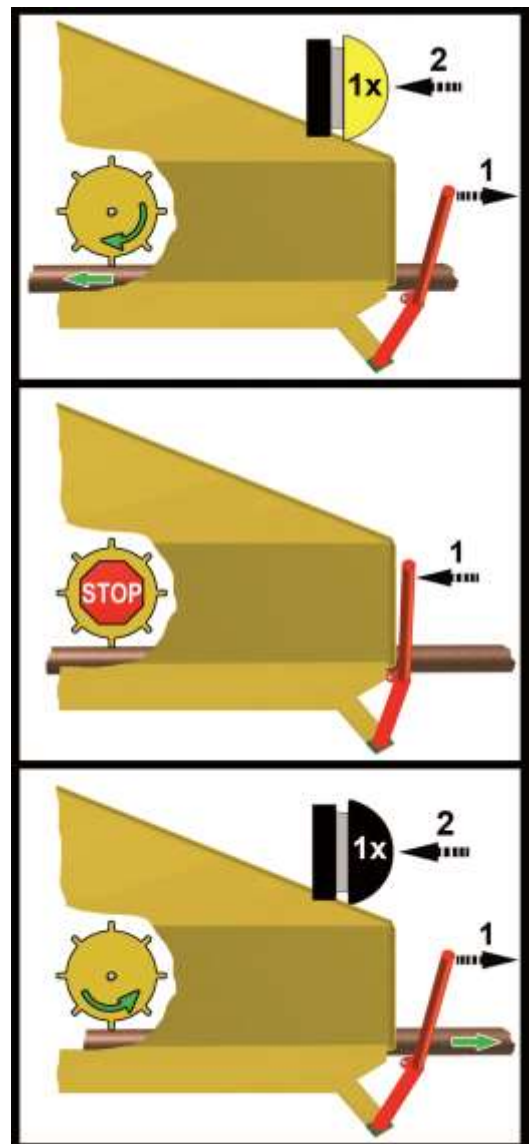

COUPLING THE MACHINE TO A VEHICLE

When hooking the wood chipper to a vehicle the procedure is as follows.

With the support wheel adjust the height of the drawbar such that the trailer coupling is standing above the vehicle. Now reel the support wheel in and the open ball head coupling has to engage on the ball of the trailer coupling.

Ensure that the trailer coupling safely engages!

The wear indication on the coupling must be in the green area (see page 16).

Then connect the arrestor cable with the vehicle and plug in the connector for the lighting. **Reel the support wheel completely in.** check the lighting.

CHECKS PRIOR TO INITIAL START-UP OF THE MACHINE

Every operator has to read and understand the provisions, and has to observe all safety measures included in this chapter. A list with the checks for initial start-up is available to the operator. These checks have to be carried out for safety reasons to ensure the safe and efficient operation of the chipper.

The following points are to be checked before using the machine:

1. The machine is sufficiently lubricated as indicated in the operating manual?
2. Check the following filling levels:
 - Engine oil
 - Coolant
 - Fuel
3. Check the hydraulic oil level.
4. Check that the air filter is clean.
5. Check that the engine radiator is clean.
6. Ensure that all hoods are closed and locked.
7. The machine must not be operated in confined spaces. Risk of intoxication because of the diesel engine exhaust gases and dust generation by the chipper.
8. The expulsion channel and the expulsion hatch are only allowed to be adjusted by an authorised operator.

Operation

IMPORTANT!

Operate the device only with Non-Road fuels or customary diesel fuel. By no means use fuel oil.

ATTENTION!

If the machine has difficulties in milling the material and has to be switched off, **do not start the engine again before having remedied the cause and removed the material from the rotor!!!**

START-UP

Before each start-up ensure that the machine is standing stable on solid ground and that the parking brake is engaged.

- 1) Check if the cover on the chimney is open.
- 2) Turn the key to connect the ignition.
- 3) Start the engine after approx. 30 seconds as soon as the **Pilot System** opens the display.
 - If the engine is cold the message **Temperature too low** appears.

(See page 44 if the engine stops immediately again and the message “slip error“ is indicated in the **Pilot System**.)



- 4) **Press key 1, 2 or 3** (see also page 42). The engine runs idle until having reached the minimum operating temperature.

Minimum operating temperature is reached: In **field 1** is activated the **symbol** and the engine accelerates to working speed.

As soon as the engine has reached working speed, the message **Press start** appears together with a **Smiley**.

- 5) Press the **yellow** key at the feed table to connect feed rollers / conveyor belt.
- 6) Now the work can be started.

In case of **overheat** the engine power drops (not the speed) at first drops by 20%. In this case check radiator and cooling liquid level, otherwise the engine power drops by another 50% and it is no longer possible to use the machine.

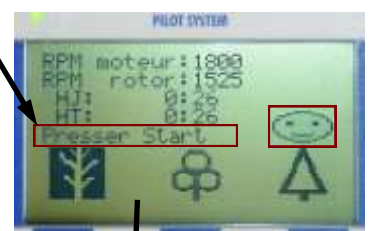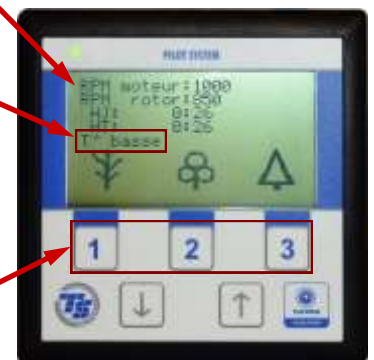

Material infeed and operation

INSTRUCTIONS FOR CHIPPING

Watch out for solid foothold of the operating personnel!

Place chipping material on the hopper bottom and move it with the thicker end (trunk) towards the infeed rollers (chamfer the thick end of the trunk).

As soon as the material is captured by the rollers move to the side, because due to unevenness of the trunk there might be material kick-out.

The captured material now is automatically chipped and hurled into the direction (distance) into which the expulsion chimney was set to beforehand.

After the material infeed from time to time attention is also to be paid to the thrown out chippings, and maybe readjust the direction of ejection. The ejection distance of the material is controlled with the ejection hatch.

When chipping splints, barks and brush-wood splintering can be avoided by always feeding the material side-by-side and lengthwise positioned into the infeed channel.

If the feed stops (jamming because of too much material or forked branches), press the **black** button (rollers rotate backwards) and the chipping material is pushed back. Now reduce the material quantity, cut the forked branch, and restart the infeed.

The hopper can only be cleaned using appropriate wooden aids.

Caution:



While the machine is running do not reach into the hopper! If required, push the kindling further using a wooden slat or wood slider! Never push the chipping material into the hopper using a metal rod or metal slider! It is also prohibited to stay in the danger area! In case of especially thick or hard wood, it makes sense to slow down the engine, reduce the speed until it has reached the rated speed.

If the area of the expulsion chimney is jammed, the hood must not be opened before standstill of the rotor and shut-down drive engine, and then the material can be removed with an appropriate tool.

Noise emission

The chipper produces a guaranteed sound power level according to Directive le 2000/14/EC :

Model	Sound power level EVA [dB]	Sound pressure level [dB(A)]
PANTHER DS	126	124



SÆLEN TS INDUSTRIE®

Material infeed and operation

SHUT-DOWN

1. Have the chipper run for some minutes empty for removing the residual material behind the infeed roller in the chipper to prevent that the rotor becomes jammed in the next application, and the message "SLIP ERROR" is indicated (see page 44).
2. For stopping the infeed roller move the control rod forward.



3. Set the engine to idle speed.

Let the engine run idle for approx. 10 seconds for temperature compensation in the turbocharger.

4. Turn the key on the control element to the left and shut the engine off.



BIODEGRADABLE LUBRICANTS FOR REDUCING ENVIRONMENTAL POLLUTION

Just by their function, the chippers from **TS Industrie** are used as a solution for the sustainable development for the production of compost, mulch and wood chips.

TS Industrie chippers are often used in woods, parks, landmarks, in the proximity of lakes and rivers, where leaks and hydraulic fluids signify a risk for the environment.

Therefore, the company **TS Industrie** contributes to the environmental protection by supplying their machines with **biodegradable high performance lubricants**.

Corresponds to the agricultural Directive 2006/11/EG.

Advantage of biodegradable lubricants:

- No risk for the environment
- Increase biodegradability
- Not toxic (based on rapeseed and sunflower oil)
- Regenerative
- Very high viscosity
- Excellent wear and anticorrosive properties
- Increased safety for the user
- Increased duration of the components
- Reduced volatility properties





SAFETY INSTRUCTIONS



1. Securely park the machine, remove the contact key and wait until the standstill of all mobile parts before starting the maintenance and repair works.
2. After termination of the maintenance works ensure that all protective devices are properly mounted and are operative.

All machines pass a test-drive before leaving the works. On delivery the hydraulic tank is filled up to the upper mark of the sight-glass with hydraulic oil. The filter has to be replaced after 150 operating hours. Thereafter, the replacement takes place according to the maintenance schedule. The first inspection is integral part of the warranty terms.

Only trained personnel is allowed to carry out maintenance and repair works.

The maintenance of the engine is to be carried out according to the enclosed operating instructions of the engine manufacturer.

On delivery, the bearings are lubricated and the transmissions are filled with oil. It is recommended to perform an inspection of the machine prior to initial start-up.

LUBRICANT: Filling quantity:

Engine: 8,9 l.

Fuel: 47 l.

Hydraulic oil: 24 l.

Hydraulic coupler: 3,85 l.



Recommended LUBRICANTS:

- 1) Lubricants for rotor knives:
Only a water resistant high-performance grease NLGI 2
"SAELEN BIOPLEX "
- 2) Lubricants for bearings, joints and different components:
Multi-purpose high-performance grease SAE (EP).
"SAELEN BIOPLEX "
- 3) Hydraulic oil:
AFNOR NFE 48603 Type HV ISO VG 46
"MINERVA BIO HYDRO 46 "
- 4) Engine oil:
See the recommendations on the engine manual supplied with the machine
- 5) Oil hydraulique coupler
AFNOR NFE 48600 Types HV iso VG 46
"MINERVA BIO HYDRO 46 "

Maintenance

ENGINE MAINTENANCE INTERVALS:

See operating instructions of the engine manufacturer

MACHINE MAINTENANCE INTERVALS


Operating hours	Maintenance works
Every day	<ul style="list-style-type: none"> - Check tight seat of the adjusting joints front side of the trailer coupling/drawbar - Check function of the safety switches and the red control rod - Check the engine oil level - Check the coolant level - Check the cleanliness of engine radiator - Check the trailer coupling - Check the tight seat of wheel nuts
First time after 4 operating hours	<ul style="list-style-type: none"> - Check the tight seat of all fastening screws - Check the tension of the rotor drive belts - Check the tension of the conveyor
Every 15 operating hours	<ul style="list-style-type: none"> - Lubricate the rotor knives and check condition of wearing rings
Every 50 operating hours	<ul style="list-style-type: none"> - Check the tension of the rotor drive belts - After the first 50 operating hours: Check the tight seat of the 8 fastening screws from rotor bearings - Check knives and counter-knives - Lubricate both rotor bearings - Check ventilation holes under the rotor for free passage - Check if material is wrapped around the bearings and remove - Check infeed rollers - Check the hydraulic oil level - Check the tension of the conveyor
Every 150 operating hours	<ul style="list-style-type: none"> - Lubricate front/rear bearings of conveyor - 1. Replace the hydraulic oil filter (thereafter all 500 operating hours or every 2 years) - Check condition of counter-knives
Every 300 operating hours	<ul style="list-style-type: none"> - Check condition of conveyor and slide plate - Check the battery acid level
Every 500 operating hours	<ul style="list-style-type: none"> - Change the hydraulic oil (or every 2 years) - Replace the hydraulic oil return filter (or every 2 years) - Replace the intake strainer in the hydraulic oil tank - Oil change hydraulic coupler

Maintenance

LUBRICATING POINTS



Shut the engine off and remove the key before the lubricating and maintenance works.

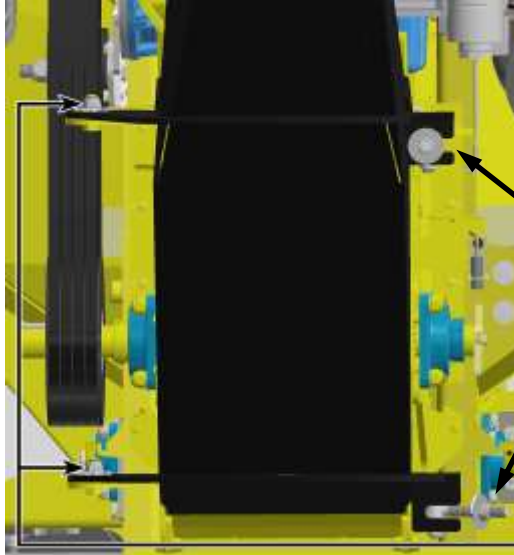


LUBRICATION OF KNIVES:

Access to the rotor:

- Loose both locknuts.

- Turn the expulsion channel to the side.

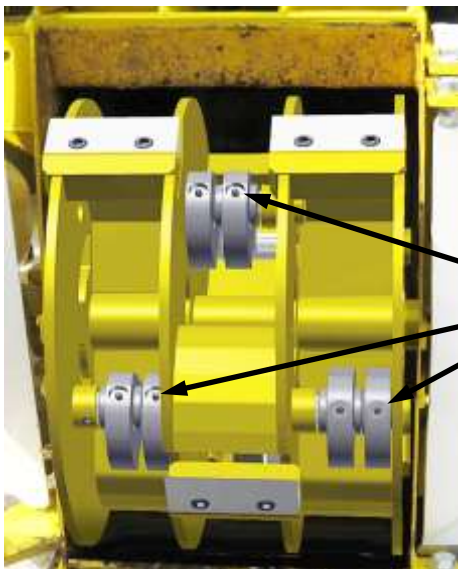


- Clean all grease nipples with compressed air or using a small screwdriver.

- Lubricate all 12 knives.



Note: Do not grease too much, i.e. only about 2 strokes with the grease gun.

An excessive lubrication, the rotation of the rotor would toss the surplus of grease against the inside wall of the chimney, and the chipped material would be expulsed with difficulty .

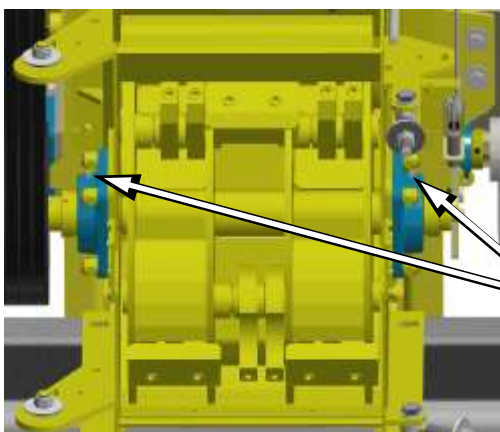

ROTOR BEARING
LUBRICATION

LUBRICATING POINTS

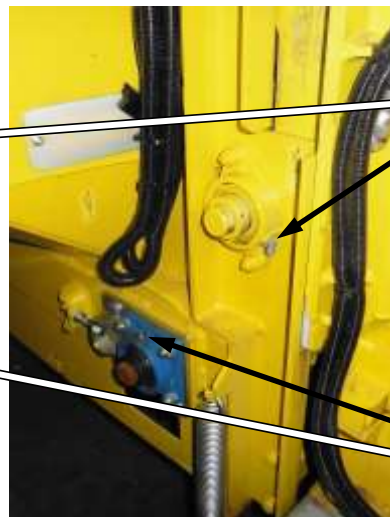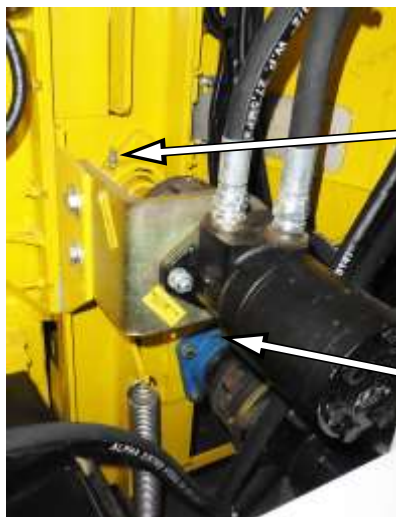


LUBRICATE INFEED ROLLER BEARING
LEFT/RIGHT

LUBRICATE BOTH FRONT CONVEYOR
BEARINGS



LUBRICATE BOTH REAR CONVEYOR
BEARINGS

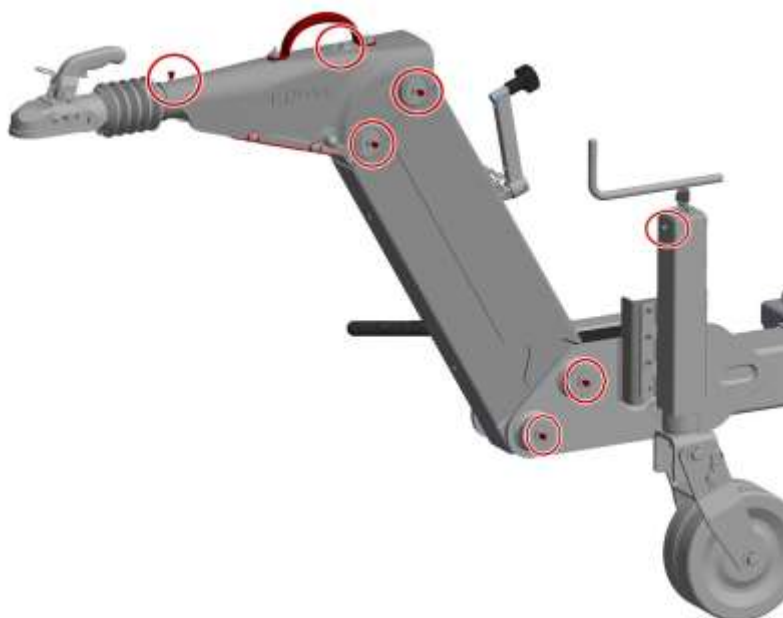


LUBRICATE SUPPORT WHEEL

LUBRICATE TRAILER COUPLING

Maintenance


OIL LEVELS

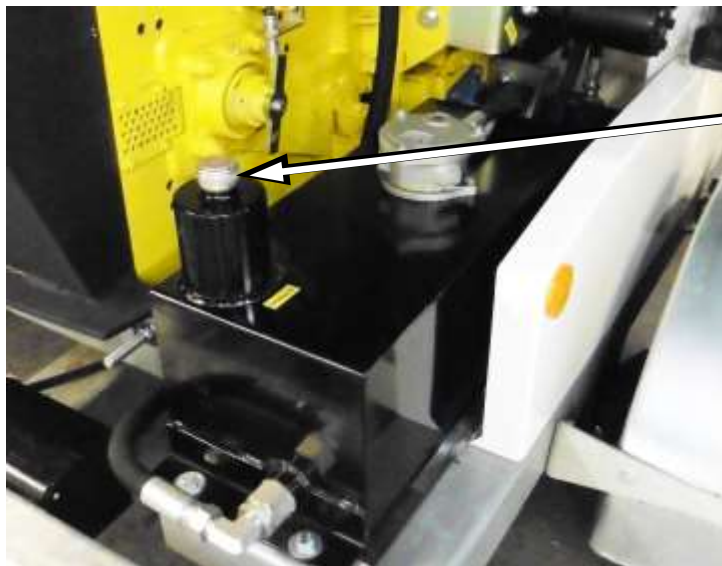

DIP STICK HYDRAULIC OIL





DIP STICK ENGINE OIL

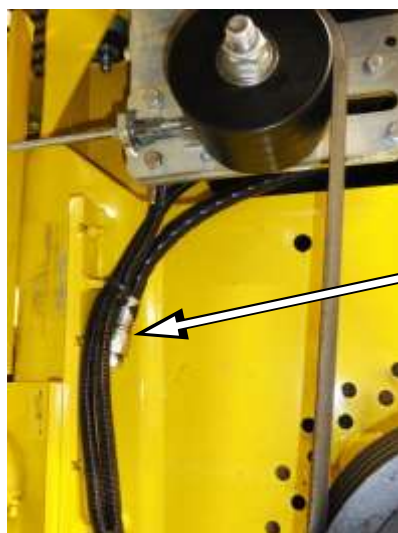

DRAIN HOSE ENGINE OIL
(evacuate the oil with the engine warm)

ADJUSTING THE TENSION OF THE CONVEYOR BELT

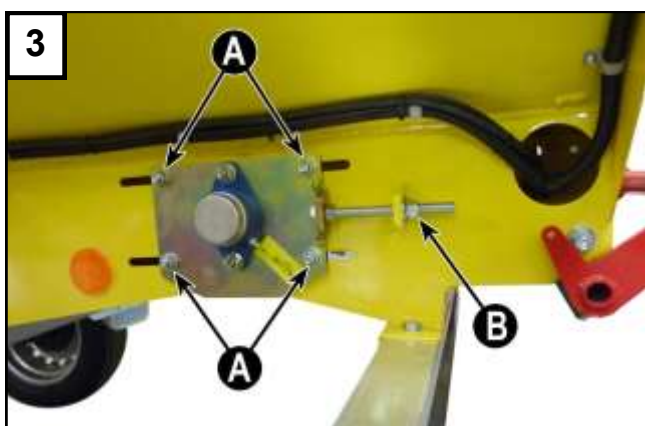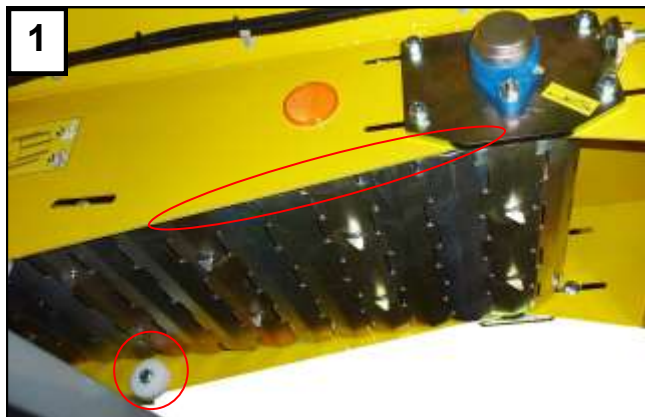

After run-in of the machine, the tension of the conveyor belt must be checked after the first 4 operating hours, and thereafter every 50 operating hours.


1 Conveyor belt correctly tensioned

2 Conveyor belt loose

3 Tension the conveyor belt as follows: Loosen on both sides of the machine all 4 nuts (A), and tension the conveyor belt with the tensioning screws (B) such that the roller is standing centrally in the window for maximum tension (Fig. 4). Tighten the nuts (A) again. Have the conveyor belt run several times forward and backward, and check for directional stability.



Note: Do not tension the conveyor belt to much; for running correctly the belt does not need excessive tension. Utilise the window for maximum tension (Fig. 4).

Attention: Avoid infeed of roots with earth still sticking to it. This might accumulate in the front drive roll and block the conveyor belt.

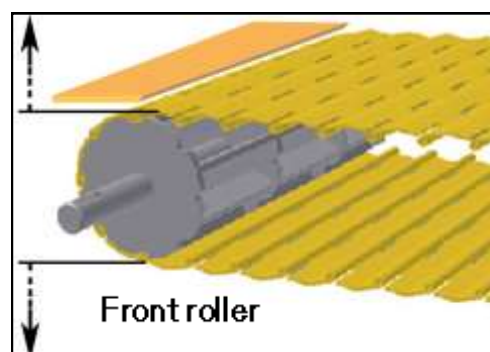

Maintenance



CHECK CONDITION OF CONVEYOR BELT AND SLIDING PLATE

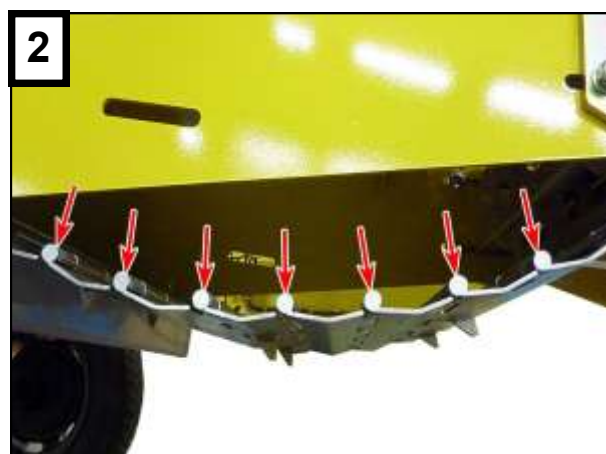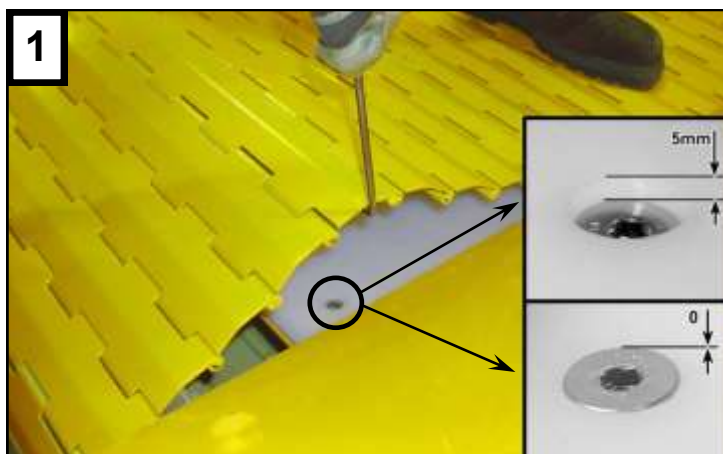

For checking the conveyor belt and the self-lubricating polyethylene plate, completely relax the conveyor belt and lift it with a hook. The following parts have to be checked:

- 1** Thickness of the sliding plate above the 4 fastening screws
- 2** Condition of the belt rods

VENT OPENINGS UNDER THE ROTOR

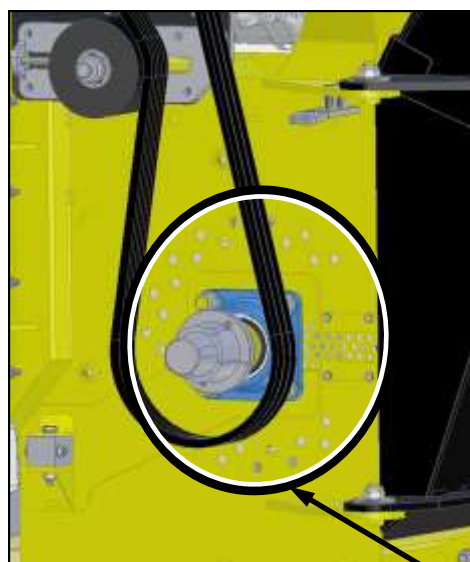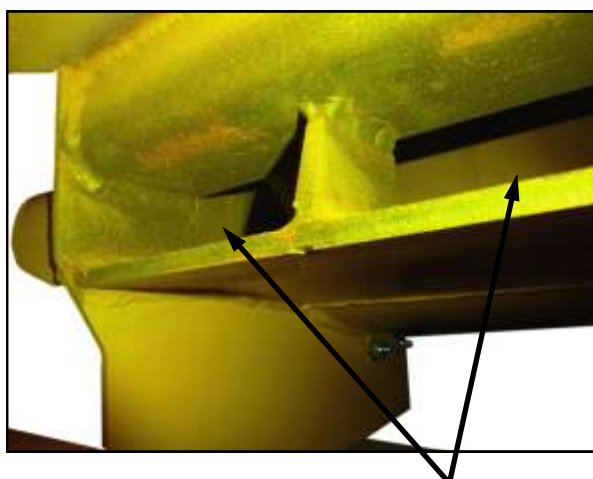


For improving the rotor ventilation and the material expulsions, the **PANTHER** is fitted with another vent opening under the rotor, additionally to the standard two lateral vent openings.


These air intakes must be checked for cleanliness and free passage in regular intervals.

Remove ignition key before the maintenance works.

Tool to lock rotor


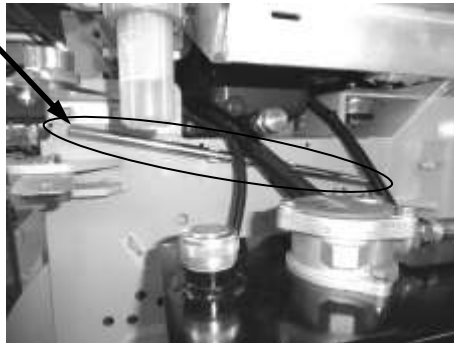


To remove knives and hammers

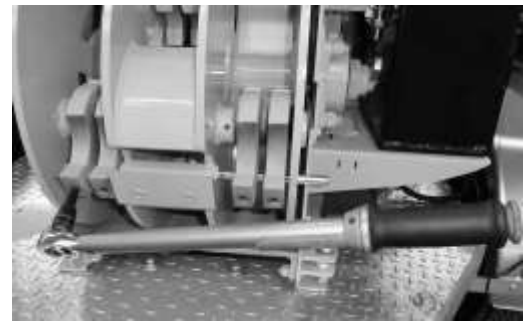

Screwlock knives and hammers:
157 N.m.

- Ex works, all 6 fastening screws of knives and inserts secured without screwlock medium, with a torque of **157 Nm (16 M.kg)**, and therefore must be loosened using a corresponding tool.
- Open the expulsion channel (see page 28).
- Unscrew all fastening screws from knives and inserts. Do always use new screws of **class 12.9** for installing knives and inserts.
- Clean contact surfaces **(1)** and shoulders **(2)** of knives and inserts.

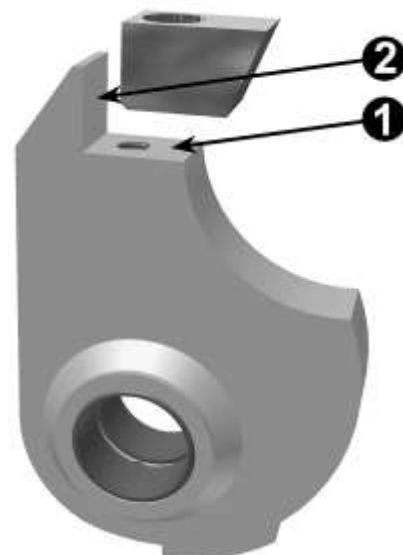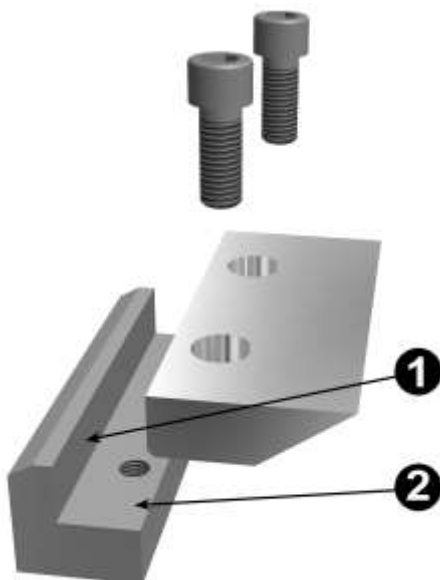


Maintenance

- Install new or sharpened knives of identical weight.

IMPORTANT: Only a specialist is allowed to sharpen the knives on an appropriate machine and not on a portable grinding machine.

Also it is to be observed that the edge of the knives is to be sharpened at an angle of 35°.

After sharpening, the length **A** must not fall below 50 mm (a new knife has a length of **60 mm**).

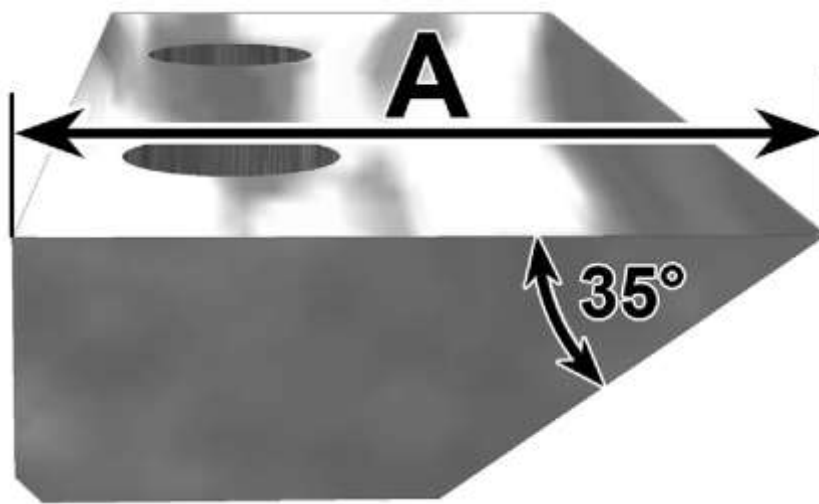

Do only use screws of type TCHC 12 X 40 class 12.9

- **Tighten screws of class 12.9 applying a torque of 157 Nm and ensure correct seat of knives and inserts.**

Tightening with the correct torque is important to prevent the screws from coming loose.

- Lubricate the knife bolts (for each grease nipple approx. 2 strokes with the grease gun).
- Close expulsion chimney and hoods again.
- Start the engine and have it run until it has reached operating temperature.
- Accelerate the engine up to maximum speed and check if the machine produces unusual vibrations.


CHECK COUNTER-KNIFE

Remove ignition key before the maintenance works.

- Unscrew retaining screws Ø10 **(1)** at both ends of the counter-knife.
- Unscrew both locking screws Ø8 **(2)**.
- Pull the counter-knife partially out of the housing. If the edge is worn, pull the counter-knife out of the housing, give it a quarter turn, such that the new edge is pointing towards the knives, and push the counter-knife back into the housing.

(The counter-knife can be pulled out of the housing on the right side as well as on the left side)

(All 4 edges can be utilised)

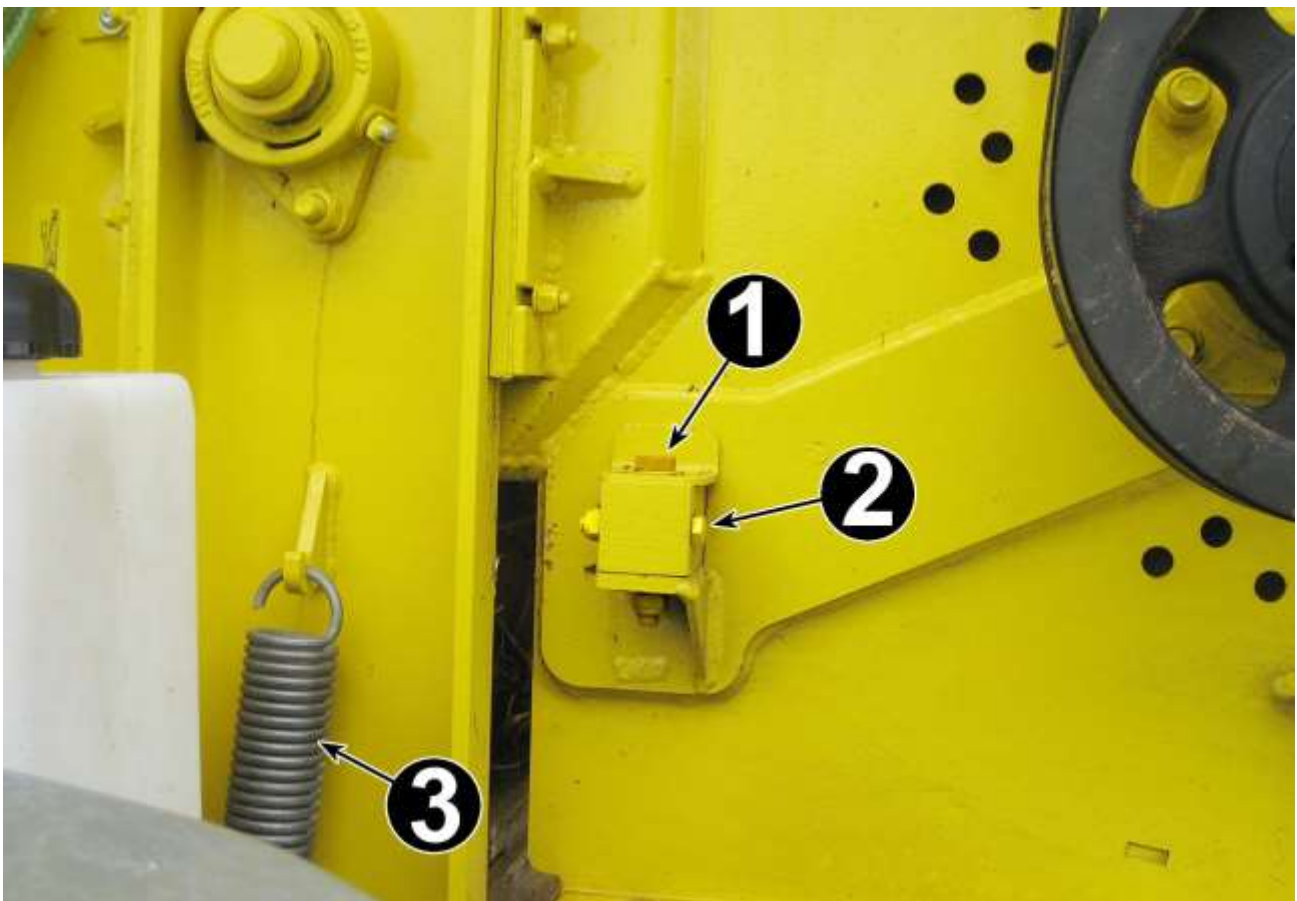

PRESSURE OF THE INFEED ROLLER ONTO THE MATERIAL


The pressure of the infeed roller onto the material is produced by two springs **(3)** on each side of the machine.

TENSIONING THE V-BELT FOR THE ROTOR DRIVE

The tension of the V-belts is ensured by a belt pulley(1).

The adjustment of the V-belt tension is carried out by loosening the nut (4) on the belt pulley as well as the locknut (3) and readjusting the belt pulley with help of the screw (2).

Only trained personnel can carry out this work.

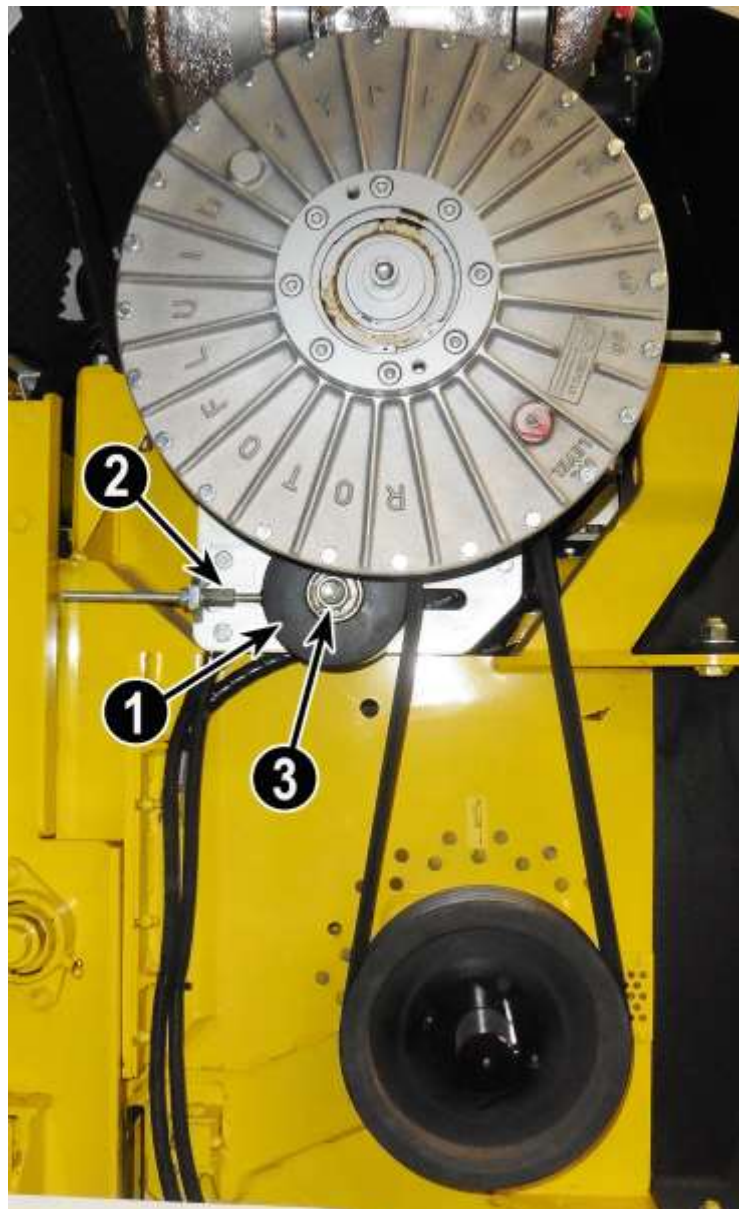

Maintenance

MAINTENANCE OF THE HYDRAULIC COUPLING

The **PANTHER** is equipped with a hydraulic coupling that requires no specific maintenance with normal use.

Changing the oil




Green fuse plug 145°

Change the oil via the green cap (*First purge the coupling by unscrewing the top cap*)




Filling

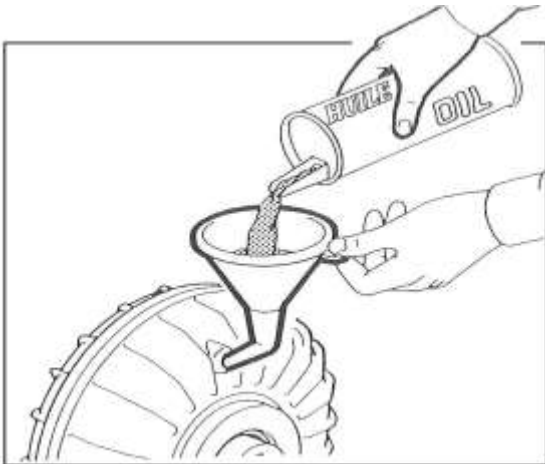

Add oil through the expansion cap or the green cap

Oil level

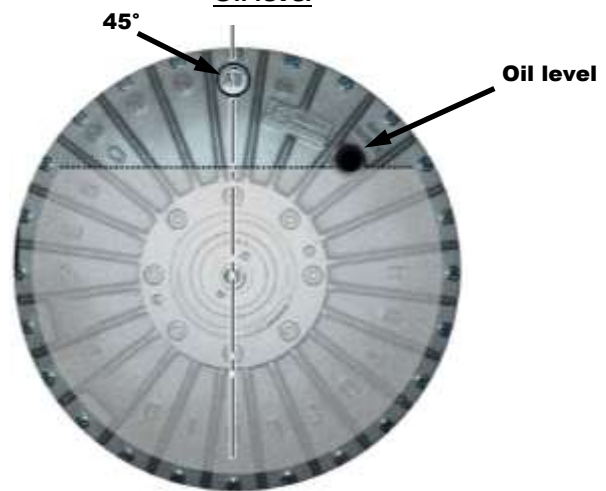

Set mark **45** vertically to the coupling axis. Remove the expansion cap and if the level is correct, the oil is at the same level as the opening.

If the rotor blocks when starting the machine (rotor blocked by some branches if it was not well emptied after previous use for example), the oil temperature will quickly rise and the oil will be evacuated outside through the core of the green fuse-cap, which is supposed to melt with a temperature above 180°C.



One security "SLIPPING" was added to avoid this problem. (see page 44)

ADJUSTMENT OF THE BRAKES

Brake lever in lower position




Push the pins out of the plastic rivets, remove the rivets and take the black plastic cover under the drawbar off.

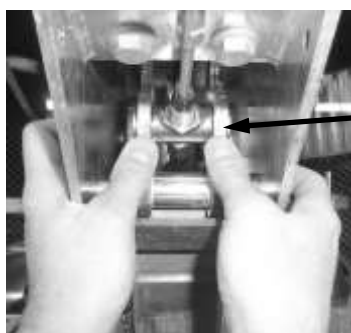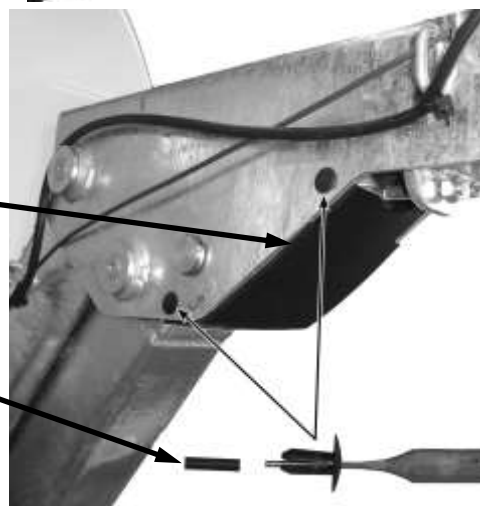


Operate the shift pawl with your thumbs and check clearance between pawl and piston plate.

Shift pawl Piston

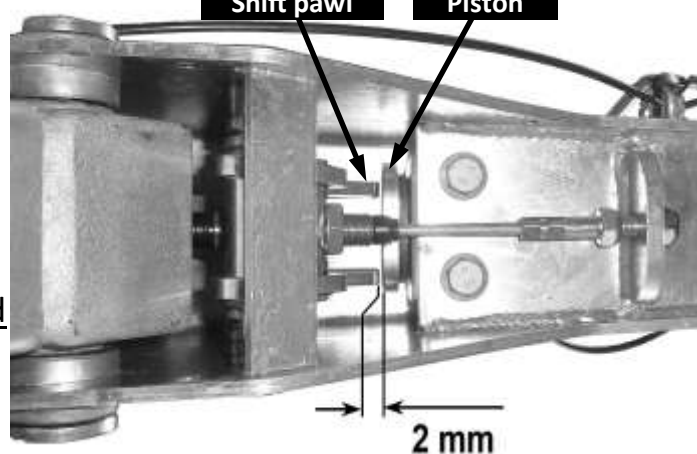

The clearance must amount to 1 to 3 mm.

Excessive clearance causes sudden and delayed braking.

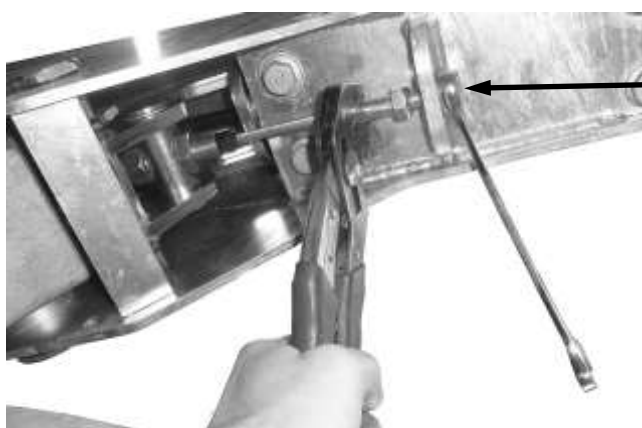

In case of excessive clearance, retighten the nut on the cable end using a ring spanner (17 mm). In case of insufficient clearance, retighten nut and locknut below in front of the axle.



Description and operation

ENGINE START SWITCH

0: Position OFF. Ignition off



1: Position IGNITION ON. Engine is running after the start



Start: Position START ENGINE

After the start the key goes back to position 1.



Description and operation

PILOT SYSTEM "SWING"

The system is connected with the electronic engine control ECU and is used for optimising fuel consumption and rotor power by adapting the engine speed to the material to be milled.

AVAILABLE FUNCTIONS

MACHINE FUNCTION:

1. Continuous indication of the engine speed
2. Continuous indication of the rotor speed
3. Continuous indication of the daily operating hours
4. Continuous indication the total operating hours
5. Indication for operation and of the pulses from the rotor encoder with green LED
6. Indication of errors with red LED
7. Hydraulic test: a fast forward and backward travel speed serves for testing the hydraulic system
8. A fast forward movement of the infeed roller serves for testing the No Stress System
9. 3 No Stress (Vario Stress) Options for choosing the type of wood
10. Service management : Intervals for oil change
11. Belt slip, clutch and hydraulic coupling system (ideal for rental equipment)
12. Cut-out fuse for engine and start interlock if hoods are open
13. Error memory
14. 21 Machine types are lodged in the memory
15. 4 optional selectable languages: English, French, German and Spanish

ENGINE FUNCTION:

16. 3 working speed adjusted to 3 NoStress milling ranges.
17. Display of engine data and errors: Oil pressure, coolant temperature, engine load, etc.




Description and operation

Description

LED:

- Green - continuous: ON
- Green - flashing: Pulses from rotor encoder
- Red - continuous: Engine hood or access to chimney open

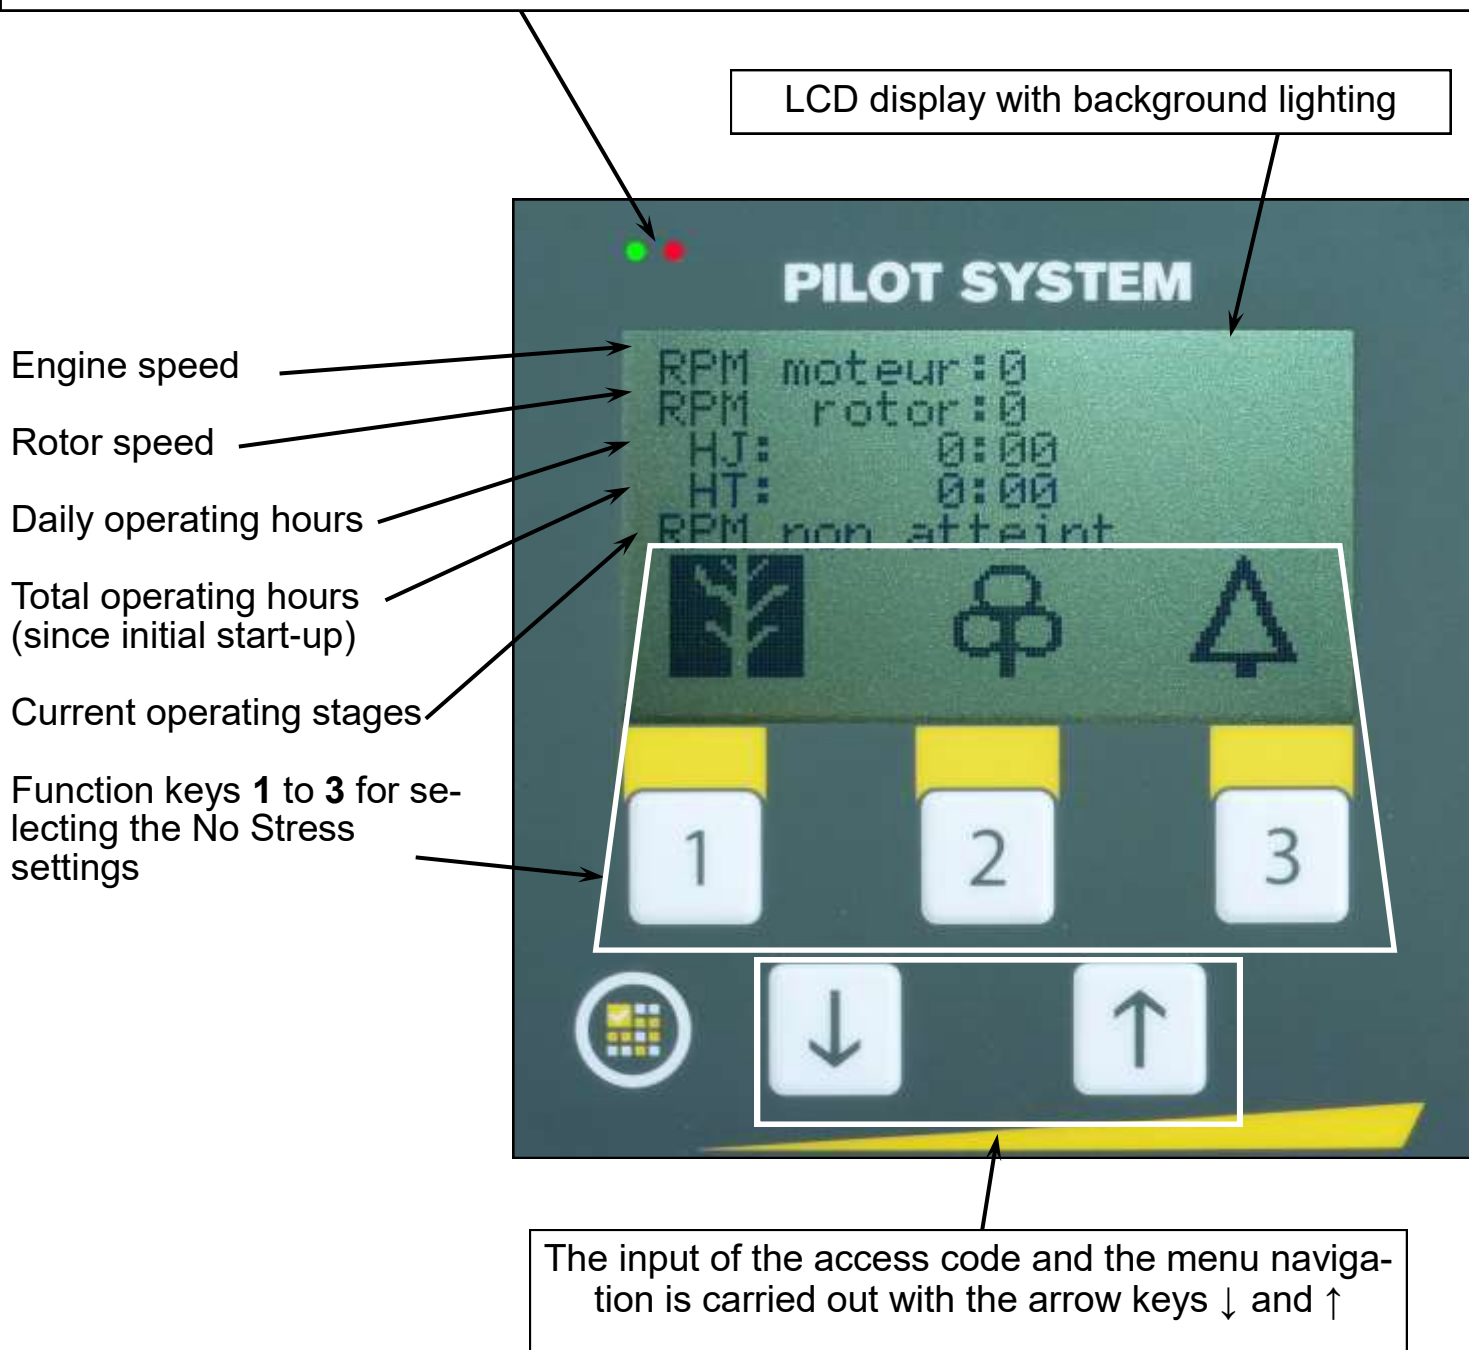

It is strictly prohibited to change the factory settings of the Pilot System. The programming person is responsible for any change of the parameters outside the works of TS Industrie.

The values indicated on the following pages are reference values only


Description and operation

Selecting No Stress settings

Key 1: The engine runs at moderate maximum speed (1800 revs/min), and No Stress matches the control of feed rollers and conveyor belt to this speed.

Appropriate for milling branches.


This application mode uses a very low amount of fuel and works at a reduced noise level.

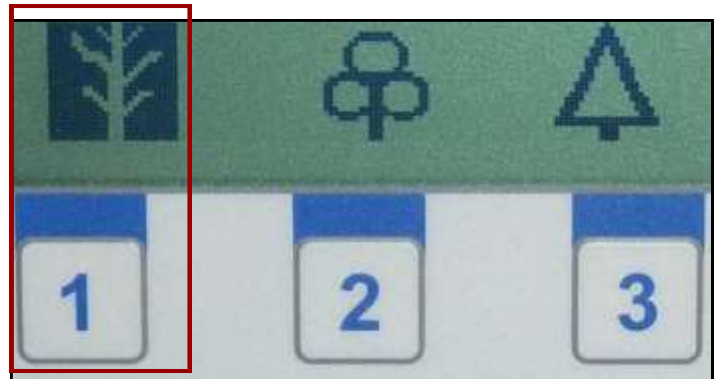

Key 2: Optimum working speed for shredding. The engine runs at medium speed (2200 revs/min) and an according No Stress control.


Appropriate for milling branches with foliage and for a short time for coniferous wood and green waste.

This mode of application consumes a low amount of fuel and does also work at a reduced noise level at maximum utilisation of the machine power.

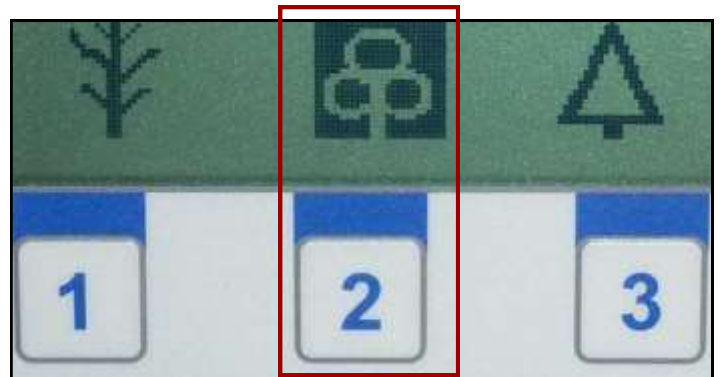

Key 3: High-performance modes of the machine. The engine runs at the maximum power allowed speed (2600 revs/min) and maximum utilisation of engine and expulsion power of the machine under extreme application conditions.

Appropriate for milling coniferous wood and heavy green waste.

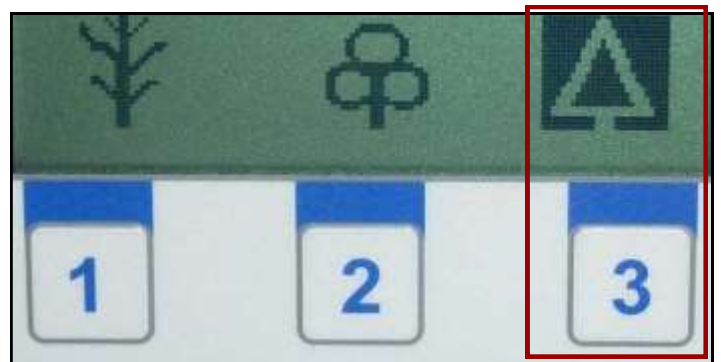


In case the settings shall be changed during the work, it is required to press the yellow button on the infeed hopper for re-starting the infeed rollers.

Description and operation

Standard operation and overspeed


The speed of the rotor is the essential data for the functional check of the machine.

The indication **RPM too low** shows that the engine speed is insufficient for continuous material infeed to the rotor.

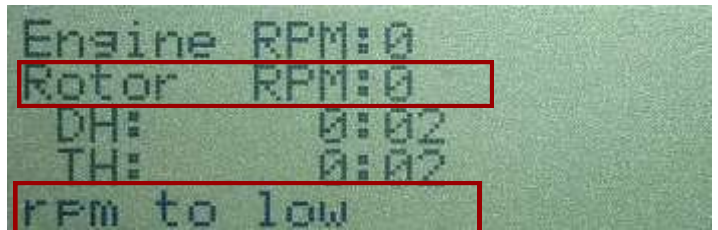


Adjust engine to max. speed. A **Smiley** is shown as soon as the minimum speed is reached for connecting the infeed roller.


Now the **yellow** button can be activated.

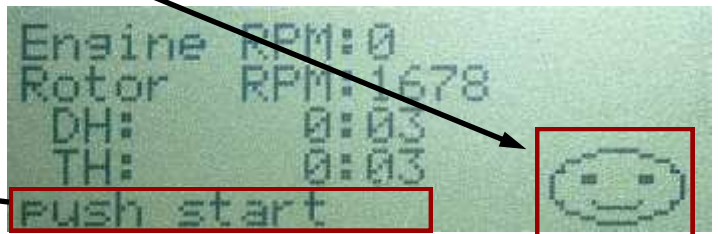

As soon as the infeed roller is rotating and the rear red control rod is activated, appears the message **infeed stop**.

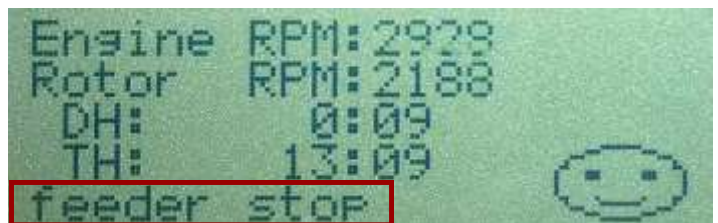

If the rotor speed is too high, the infeed roller is automatically stopped to protect the machine. At the same time appears the symbol Attention as well as the message **overspeed**.

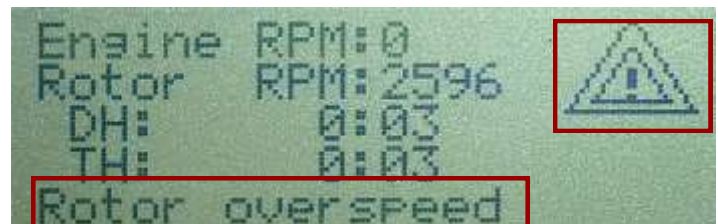


After having removed the cause for the overspeed it is required to reduce the engine speed to idle running, then increasing it again to max. Speed, to allow the infeed roller to re-connect.

Slip function

The Pilot System controls the slip between the belt pulleys of rotor and engine by continuous comparison of both speeds. For the protection of V-belts, centrifugal clutch and hydraulic coupling, a slip of one per cent is admissible. If slip increases to over one per cent, the engine is shut off and the following messages appears on the display.

Different reasons for slip:

- Rotor blocked
- V-belt loose
- Coupling worn

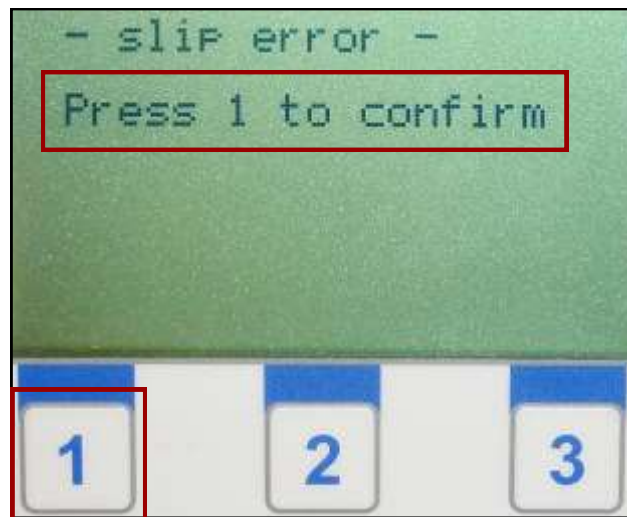


Note: Slip can be produced if the machine from standing is accelerated very slowly.

After stopping/checking the drive press key 1 to be able to continue work.

Date and time of this message are saved in the memory of the Pilot System, and can be read by the dealer.


Access to the CUSTOMER Parameters Code 3003

1

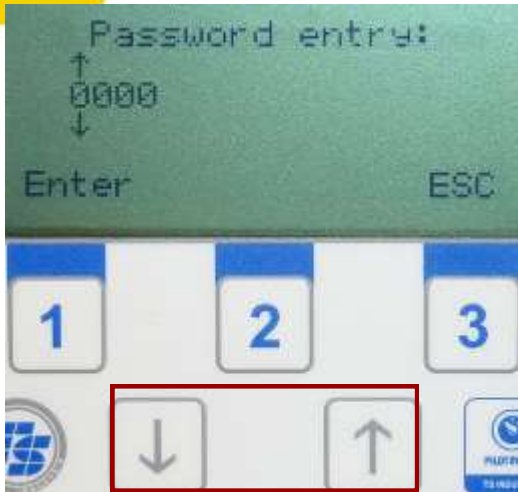


Keep key ↓ and ↑ pressed for 4 seconds.

2

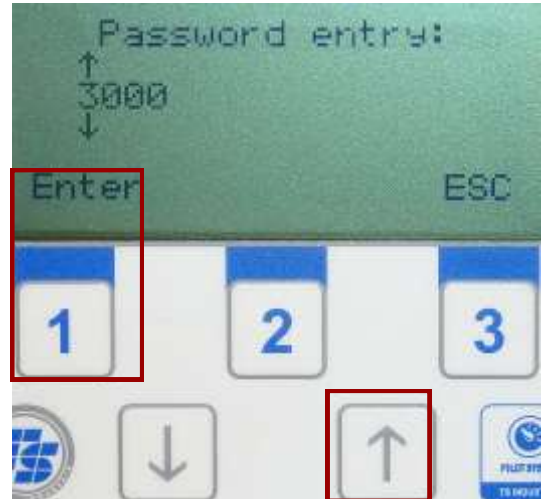


Press key ↑ **3 times** until the number 3 is displayed, than confirm with key 1.

3

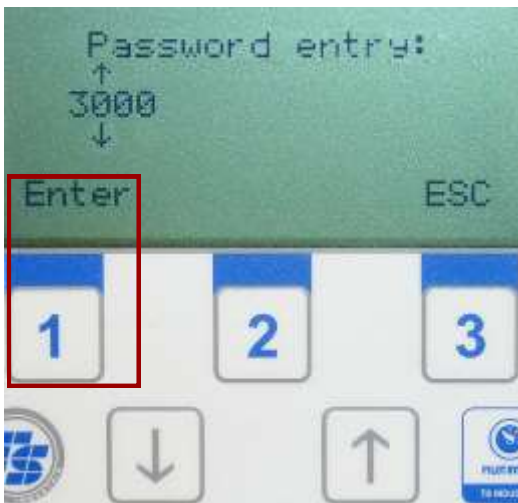


Press key **1** for confirmation and go to the first 0.

4

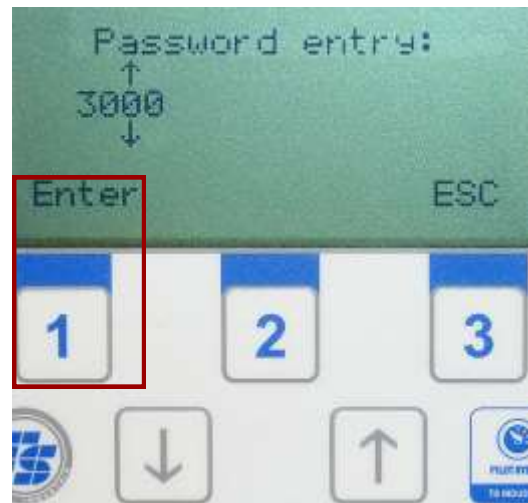


Press key **1** again for confirmation and go to the second 0.

5

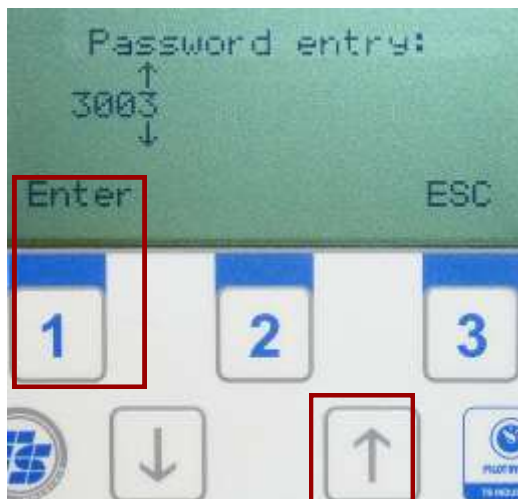

Press key ↑ **3 times** until the number 3 is displayed, the confirm with key **1**.


6

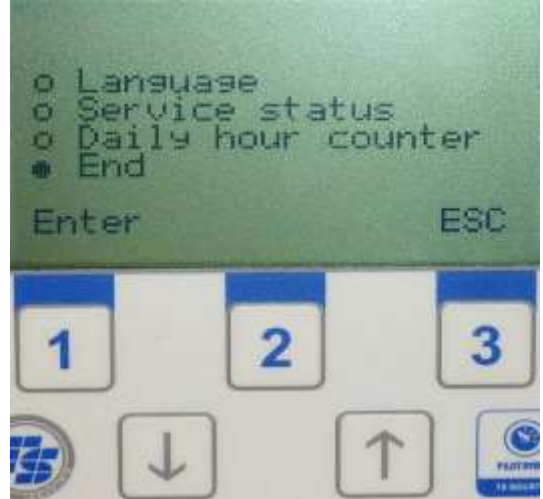


Now, the user has access to different functions and **END** navigation.

Description and operation


Reset of the daily operating hour counter

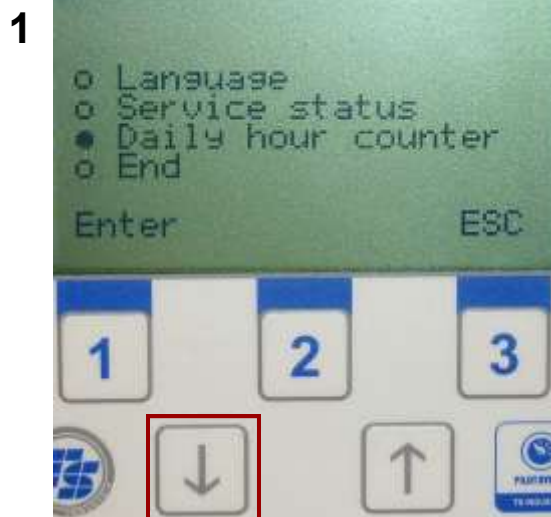


Press key ↓ and put the cursor on **Daily oper. hrs.**

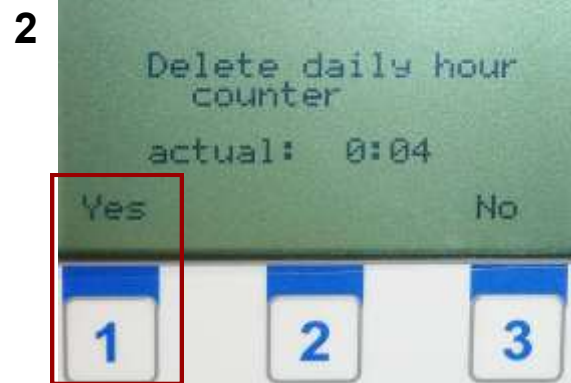

Press key **1** to confirm deletion of the daily operating hours.

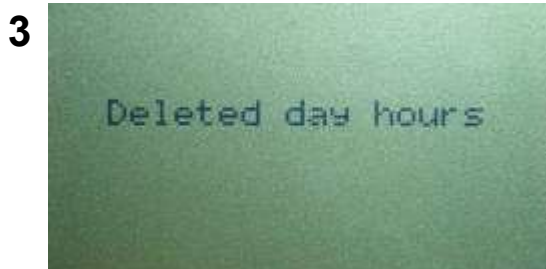

The process is indicated with a corresponding message.

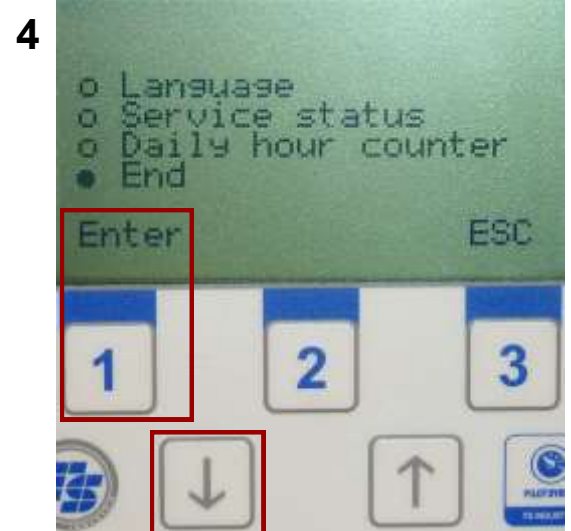


Press key ↓ and put the cursor on **End**. Confirm with key **1 Enter**.

Description and operation

Overdue service and further service information (engine oil change)

When starting the machine, the system shows a warning message and a corresponding symbol as soon as maintenance is due or overdue.

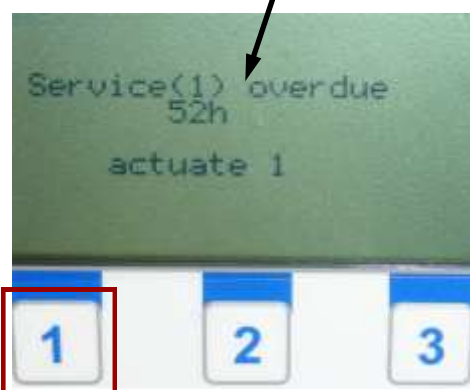

Agree with your dealer a date for an oil change. The message is saved in the Pilot System. Press key 1 for confirming the message and to be able to continue work.




Press key ↓ or ↑ once or twice for displaying the next oil change or service. Contact your dealer to agree a date.

Description and operation

Rotor speeds of the No Stress settings

(The examples are reference values only)

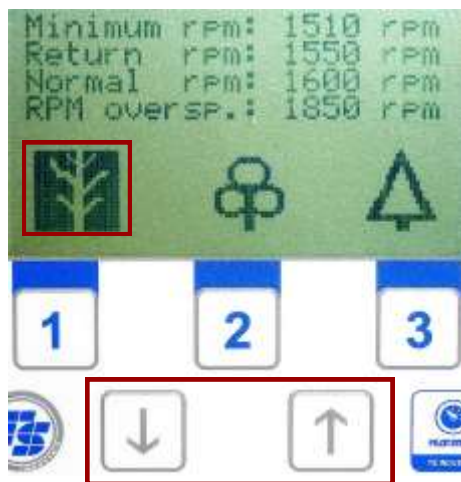

Press key ↓ or ↑ once or twice at any time for indication of the **rotor speed** for the selected NO Stress setting:

Example setting 1:

Minimum rpm: Speed below 1510 rpm. The infeed roller is disconnected.

Return rpm: As from a speed of 1550 rpm. The infeed roller is restarted.

Normal rpm: After an overspeed of the engine, the speed of the rotor must be reduced to below 1600 rpm for the infeed roller to reconnect.

RPM over sp.: Overspeed. The infeed roller is switched off at a speed of 1850 rpm.

Attention:




It is strictly prohibited to change the factory settings of the Pilot System. The programming person is responsible for any change of the parameters outside the works of TS Industrie.

Description and operation


Hood safeguard

An open or incorrectly closed hood is indicated by a **red LED** and a corresponding message. The safety system shuts the engine off and impedes a restart. In this case, close the affected hood correctly and then press key **1**. The message disappears.

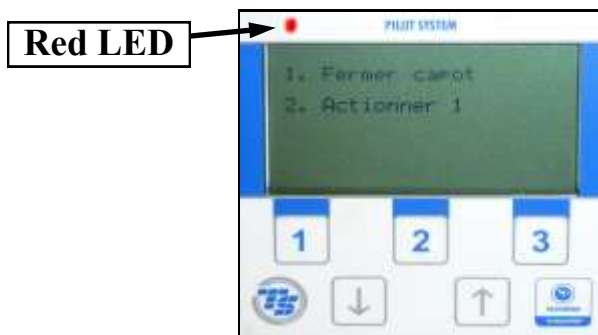

Chipping disk speed encoder pulses

A permanently shining **green LED** shows that chipping disk and system are operating. The LED starts flashing when it receives a signal from the speed encoder M18 on the chipping disk. The frequency of the flashing changes with the speed of the chipping disk.

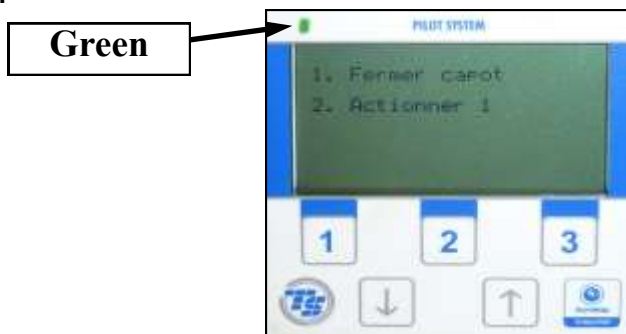


Engine error codes

In case of engine failure, the engine ECU sends a **SPN** code at Pilot System .

Red LED flashing: error display without engine stop

Red LED continue: error display with engine stop

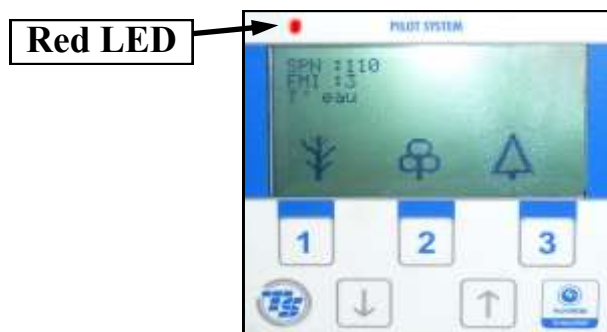


Engine error code list known to the Pilot System:

SPN: **97** Water in diesel filter
SPN: **100** Oil pressure
SPN: **110** Water temperature
Unknown SPN: **Unknown error.**

Description and operation

Exhaust DPF

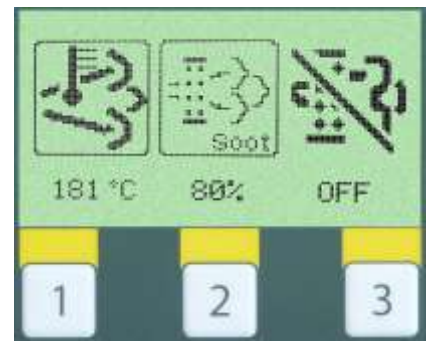

To meet the new European emission standards STAGE V, the engine is equipped with a DPF; exhaust with particulate filter, whose regeneration is controlled by the engine ECU. When the level of soot in the DPF requires a "cleaning" called regeneration, the engine needs to run at full capacity for the time necessary to perform this maintenance. This can be done in 2 ways:


1) in a "**passive**" way if he uses his machine for a sufficient time to complete the task.

A particular engine noise and odour as well as black fumes may be perceived by the user, indicating a transparent passive regeneration in progress without displaying a message on the Pilot System screen.


2) in a "**active**" way with warning on the Pilot System display and blocking of the feeder roller/conveyor belt. **The engine will accelerate at 1800 RPM and should not be stopped until the message of the end of the task appears, ~45 to 60 mn.**

When the Engine requires active regeneration, the following information message appears on the display and the red LED lights up of Pilot System.

Note that the Speed will be changed to the idle one and the feed roller will be deactivated.

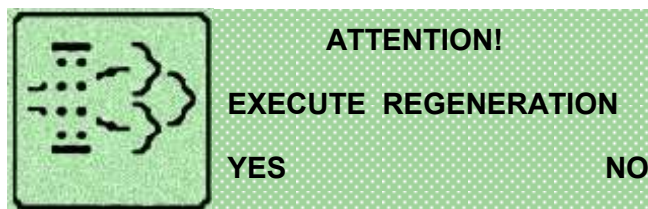


When answering the request with "**No**", button **3**, the following message will be displayed:

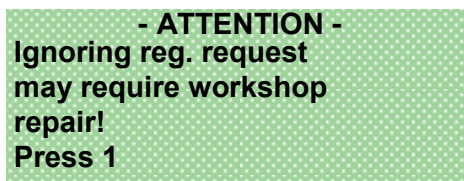

The Regeneration request will appear once again in 30 min in case it was declined.

Note: If the user repeatedly refuses regeneration, it may cause premature and irreparable damage to the DPF, requiring its replacement and intervention by the Kohler engine network. Both messages will appear:


Red code (red LED)
SPN 4781
FMI 15

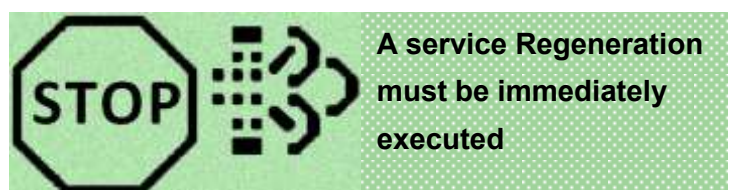

The state of the engine becomes critical when this message will be displayed, because the user has chosen to ignore performing the generation many times. In this case the machine has to be brought to a motor workshop to perform urgently a service generation.

Note that the Speed will be changed to the idle one and the feed roller will be deactivated and the user will be no longer able to work with the machine.

 See
next
page



SAELEN TS INDUSTRIE


Description and operation

When you answer the request with "Yes", key 1, the following message is displayed during the heating time of the engine:




For regeneration to begin, the motor must be at least 60°C.


As soon as the active regeneration starts, the following message is displayed:

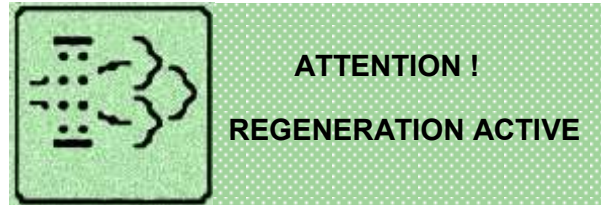

When an active regeneration is executed, the exhaust temperature can be high. The following information message is displayed:

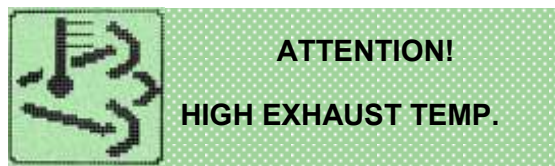


The following message will be displayed once the regeneration has been successfully executed:

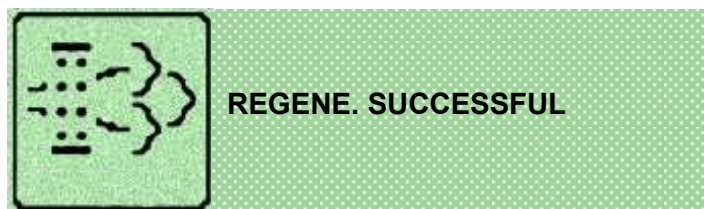

Press "OK" button 2 to close the window. Regeneration is complete, put the engine in idle speed and stop the machine. The user can use the machine again.

The message **HIGH EXHAUST TEMPERATURE** may also be displayed when the exhaust temperature is above 500 ° C during normal use.

A particular engine noise and odour may be perceived by the user, indicating a passive regeneration in progress without displaying a message on the Pilot System screen.


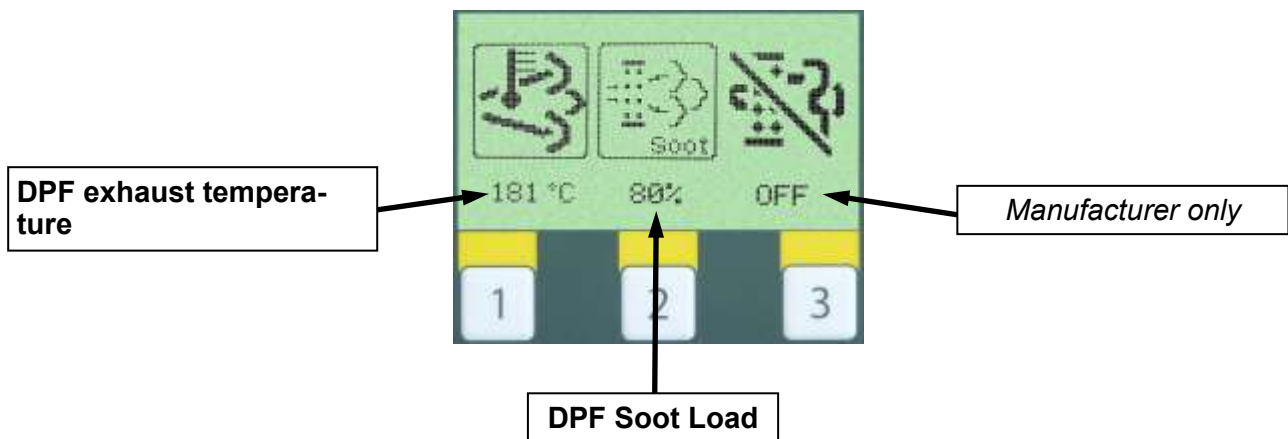


Description and operation


TANKS

The machine is fitted with two tanks:

Hydraulic oil tank with a capacity of 28 liters, consisting of:

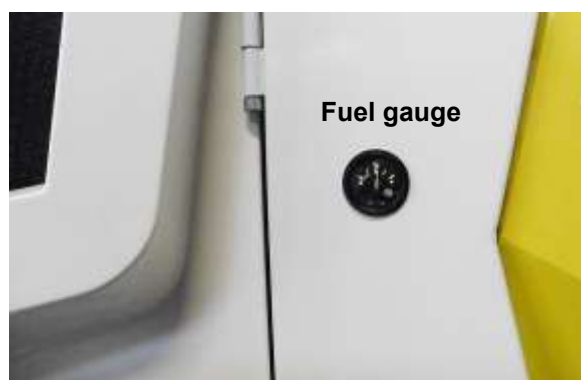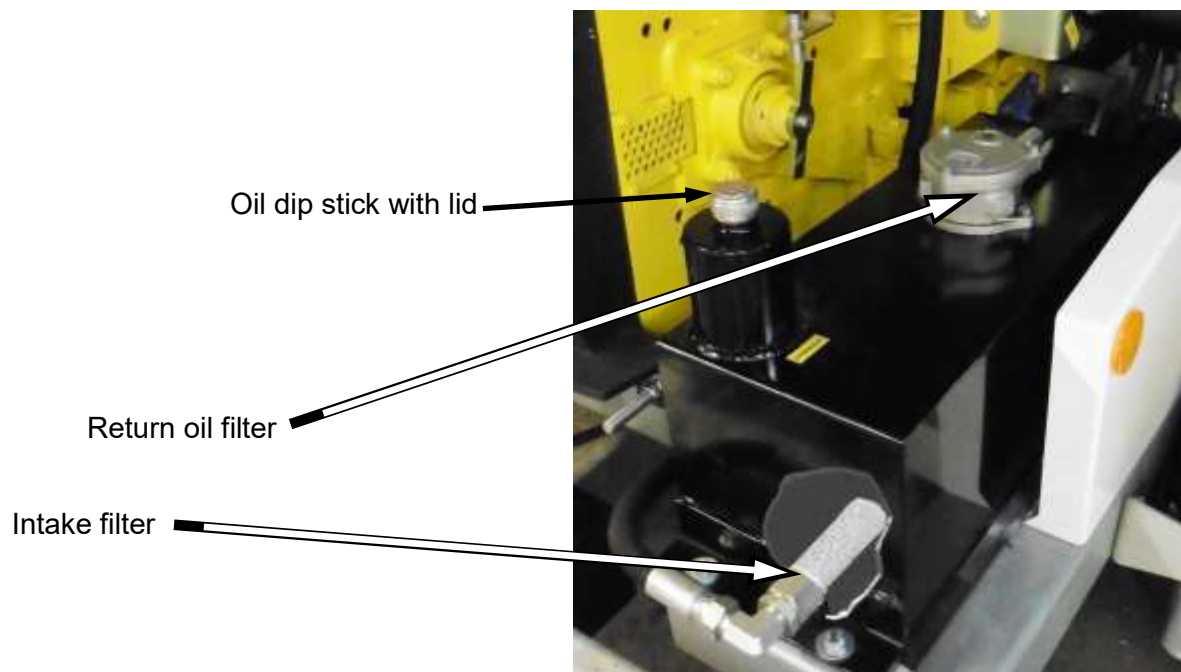

Removal of rear covers

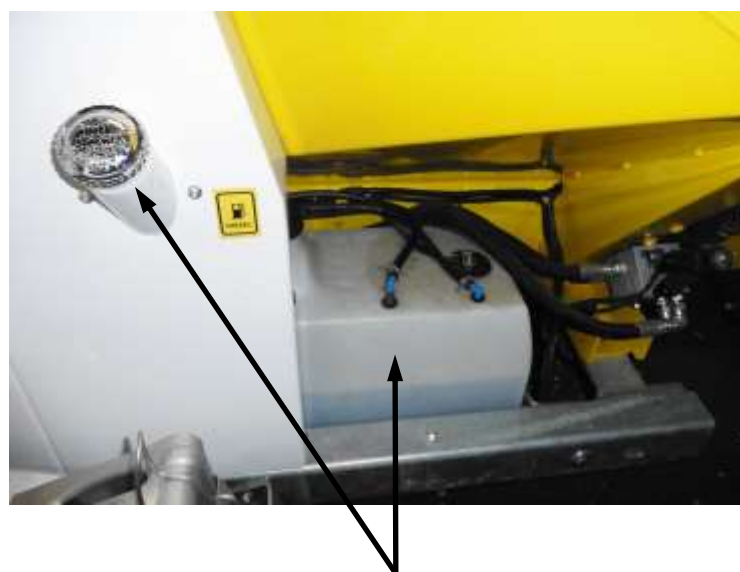

Description and operation

HOOD AND EXPULSION CHANNEL SAFEGUARD

The machine has security devices on the opening of hoods:

An inductive pick-off (1) placed on the hood's right door. The electric contact is made when the magnet (2) fixed on the left door of the hood is approached.

When you open either one of the doors the security device stops the diesel engine.



The machine is fitted with a safeguard for expulsion chimney:

An inductive sensor (3) placed on the front right engine bracket. The electric contact is made when the magnet (4) fixed on the ejection chimney is approached.

When you open the chimney, the security device stops the diesel engine.



The proximity switch must not enter in contact with the magnet. The distance between sensor and magnet must amount to 6 mm +/-5 .

Description and operation

EMERGENCY STOP SWITCH

The machine is also fitted with four emergency stop switches, one on each side of the machine.

When activated, these switches have the following functions **(the Pilot System is switched off)**:

- 1) Diesel engine shut off
- 2) Infeed roller shut off




Description and operation

PROXIMITY SENSOR AND FUSE

The proximity sensor M18 (Ø18) at the end of the rotor shaft captures the speed and sends it to the Pilot System.

The distance between sensor and metal pin opposite of the V-belt pulley must amount to **4 mm** ± 1 .

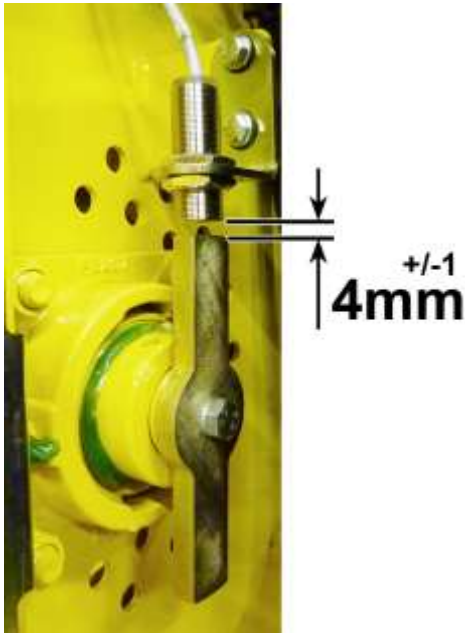

If after the start the engine is shut off again after some seconds and on the Pilot System appears the message "Slip error", it is required to find the cause for the error: *Rotor blocked by chipping remains, loose or broken V-belts, defective coupling, defective sensor M18.*




One blade-type fuse **40 A** is located in the fixture on the battery cable beside the starter motor.



Description and operation



Principe de fonctionnement du système CO2 RÉDUCTION (option)

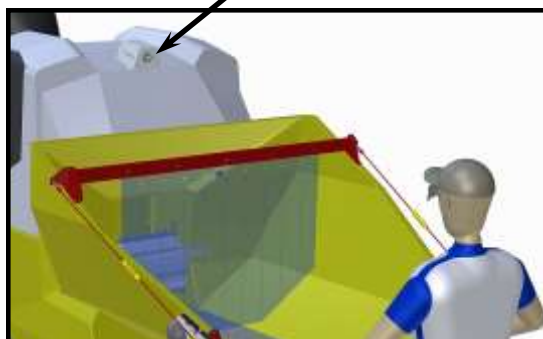

The grinder is a machine continuously running at an increased engine speed with alternating extreme and low load, depending on the conditions of application. This operating mode involves a high fuel consumption and noise level and high exhaust emissions.

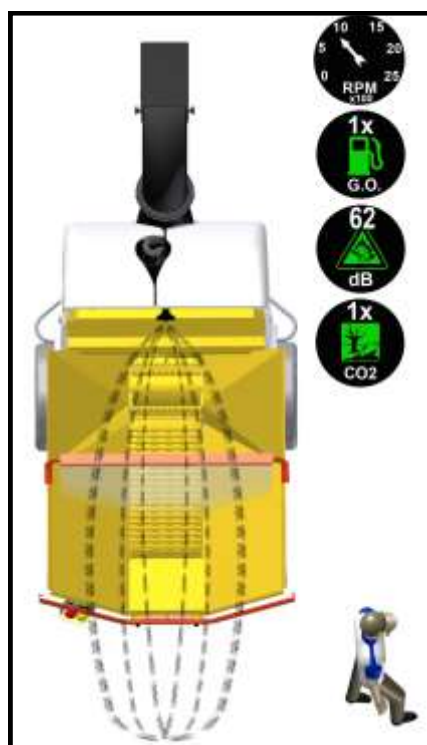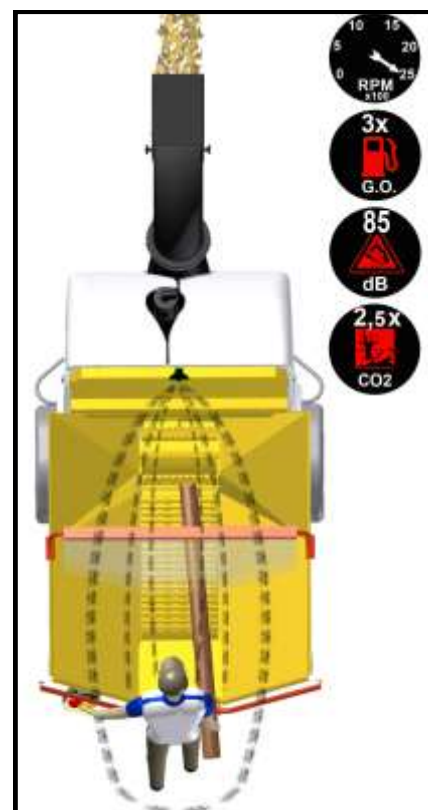

In order to exclude these disadvantages and to protect the environment, after a certain period of time in which the operator is away from the machine, the system switches the engine to idle running for reducing the CO2 output. As soon as the presence detector of the CO2 reduction has captured the operator, the engine goes back to working speed and rotor and conveyor belt are reconnected after 2 seconds.

Furthermore, the CO2 reduction contributes to the extension of the duration of important components (diesel engine, propulsion, conveyor belt, feed rollers, motors and hydraulic circuits) of the machine.


Voir utilisation pages suivantes

SÆLEN TS INDUSTRIE®

Description and operation

The presence detector at the back of the housing detects the operator up to 2 m behind the hopper with a width of approximately 1,10 m. The hopper area is a dead zone that is not taken into consideration by the detector. Objects in this area will not accelerate the diesel engine or the rotation of the feed belt/roll.

All objects, even inert ones, e.g. a wall or a vehicle at less than 2 m behind the chipper will generate the automatic acceleration of the engine.

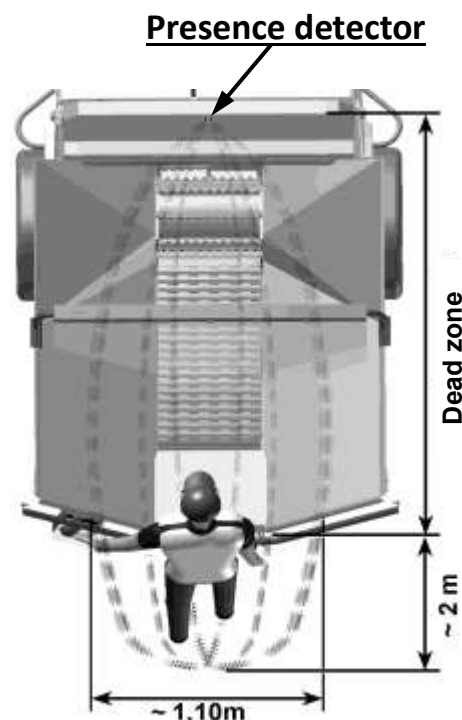


The system for CO2 reduction is not automatically connected (off). I.e. the engine does not automatically accelerate on the first start after the operator is captured by the presence detector.

Use of the machine with the CO2 reduction:

After starting the engine press **1x** key ↓

(or **4x** key ↑) to open the **display CO2 reduction**.

The system is switched off (**off**) and all 3 delay times are displayed with a light background.

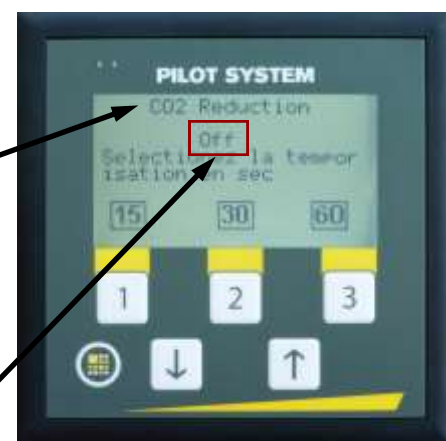


Note: The activation procedure is identical for all 3 delay times.

Activation of the 15 seconds delay time:

-Press key **1**


-The delay time of **15** seconds is displayed with dark background.

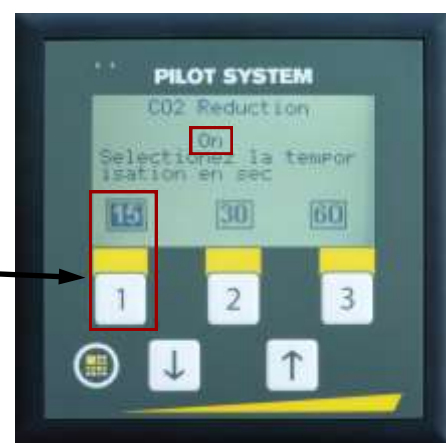

Continued on next page

Description and operation

- Press the key **↑** to switch to the main display.
- Select the desired mode of application 1, 2 or 3.
- Place yourself in the caption area behind the feed table.
- The engine accelerates up to working speed. Press the **yellow** key for starting rotor and conveyor belt.

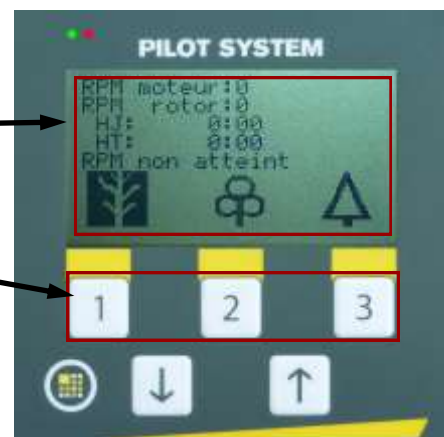

The engine runs at maximum speed as long as the operator is within the caption area.

If the operator abandons the caption area, rotor and conveyor belt are switched off after **15** seconds.

The engine accelerates again and rotor / conveyor belt are reconnected as soon as the operator is captured by the presence detector.

The CO2 reduction and the selected delay time (15 sec.) remain active as long as they are not deactivated for switching the CO2 reduction off.



Note: Use of the CO2 reduction is described on **page 22**.

Perturbation du détecteur de présence:

- Ne jamais modifier la hauteur du support de bavettes anti-rejets.
- Ne pas modifier l'inclinaison du support de détecteur.
- Ne pas laisser de branches "dormir" au dessus du support de bavettes.
- En cas de **très forte pluie** ou de **vent fort**.

Description and operation

EXPULSION CHANNEL

After opening the latch (1) the upper part of the expulsion chimney can be turned by 90° to the left and by 90° to the right.



Troubleshooting

In this chapter we have compiled a list of possible errors, their causes and their solutions. In case an error appears, which is not listed in chapter "Troubleshooting", please contact your dealer. Have your operating manual and the serial number of your machine on hand.

FAILURE	CAUSE	REMEDY
The engine is shut off and the Pilot System shows the message "Slip error".	-See page 44	
Not possible to connect the Pilot System	- Emergency stop switch activated	- Unlock switch
The engine does not start	<ul style="list-style-type: none"> - Emergency stop switch activated - Hood open - Hood/expulsion channel safeguard wrong adjusted or defective - 40A-fuse defective - Battery empty - Supply cable damaged 	<ul style="list-style-type: none"> - Unlock switch - Check locking of the hoods - Check sensor (see page 51) - Replace fuse (see page 53) - Charge or replace battery - Check electric circuits
Reduced engine output	<ul style="list-style-type: none"> - Radiator clogged - Knives/Counter-knife blunt - Fuel filter clogged 	<ul style="list-style-type: none"> - Clean radiator - Sharpen or replace knives/inserts - Replace filter
The engine shuts off and cannot be restarted	<ul style="list-style-type: none"> - Hood/Expulsion channel not correctly locked - Hood/Expulsion channel safeguard defective - Fuel tank empty 	<ul style="list-style-type: none"> - Check locking of the hoods/channel - Check sensor (see page 53) - Fill with fuel

Troubleshooting

FAILURE	CAUSE	REMEDY
No forward or backward motion of the conveyor belt or of the infeed roller	<ul style="list-style-type: none"> - Regulating screw at infeed completely screwed down - Hydraulic motor or pump defective - Oil deficiency in hydraulic tank 	<ul style="list-style-type: none"> - Loosen the regulating screw - Check defective part or replace - Check oil level
The machine is chipping with difficulties	<ul style="list-style-type: none"> - Knives/Inserts blunt - V-belt damaged or loose 	<ul style="list-style-type: none"> - Sharpen or replace knives/inserts - Replace or tension V-belt
The infeed roller does not regulate, neither under the switch-on limit of the Pilot System	<ul style="list-style-type: none"> - Failure of the electric or hydraulic installation 	<ul style="list-style-type: none"> - Contact dealer

PROBLEM - SOLVING CO₂ REDUCTION (option)

PROBLÈME	CAUSE	SOLUTION
The engine does not automatically accelerate	<ul style="list-style-type: none"> -Poor alignment of the vision area of the radar -Radar interference -Radar problem 	<ul style="list-style-type: none"> -Check if the radar is horizontal. -Check if there is no branche above the arch and/or if the lips are not put upwards above the holder -Switch off the engine and check at the back of the radar if the engine is warm and if, 10 seconds after making contact: <ul style="list-style-type: none"> * the 1st green light is on * the 2nd yellow light is on when a person is detected behind the hopper of the chipper * if the 2nd light is blinking red: contact the seller


Specifications

PANTHER DS	
Performance:	7,48 inches
Hourly output:	38 m³/h
Length:	4.51 m
Width:	2.20 m
Height:	2.36 m
Weight:	2017 kg
Number of inserts:	12
Number of knives:	6
Rotor diameter:	560 mm
Rotor weight:	150 kg
Rotor width:	400 mm
Engine power:	56 PS Kohler KDI 1903 TCR
Fuel tank capacity:	47 l
Engine speed:	2600 rpm
Rotor speed:	2080 rpm
Overload protection:	Yes
Hydraulic supply:	Yes
Hydraulic oil tank capacity:	28 l
Hydraulic pressure:	120 bar
Test drive:	Yes
Noise protection:	Yes
Number of wheels:	2
Tyres:	215R14C
Tyre pressure:	4.5 bar
CO2 REDUCTION:	Option,


Hydraulic connections



1	R2T13	2300	FBSP1/2xFBSP3/8 90°
2	R2T13	1350	FBSP1/2xFBSP3/8 90°
3	R2T13	850	FBSP1/2xFBSP1/2
4	R2T13	2800	FBSP3/8xFBSP1/2 90°
5	R2T13	1650	FBSP1/2xFBSP1/2
6	R2T19	2200	FBSP3/4xFBSP3/4
7	R1T10	600	JF7/8xJF3/4

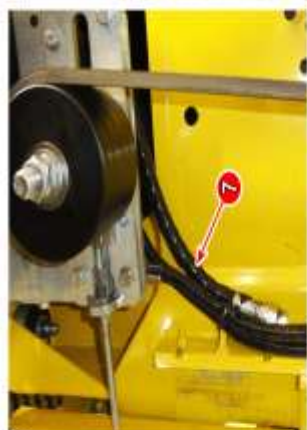

Hydraulic Circuit Diagram


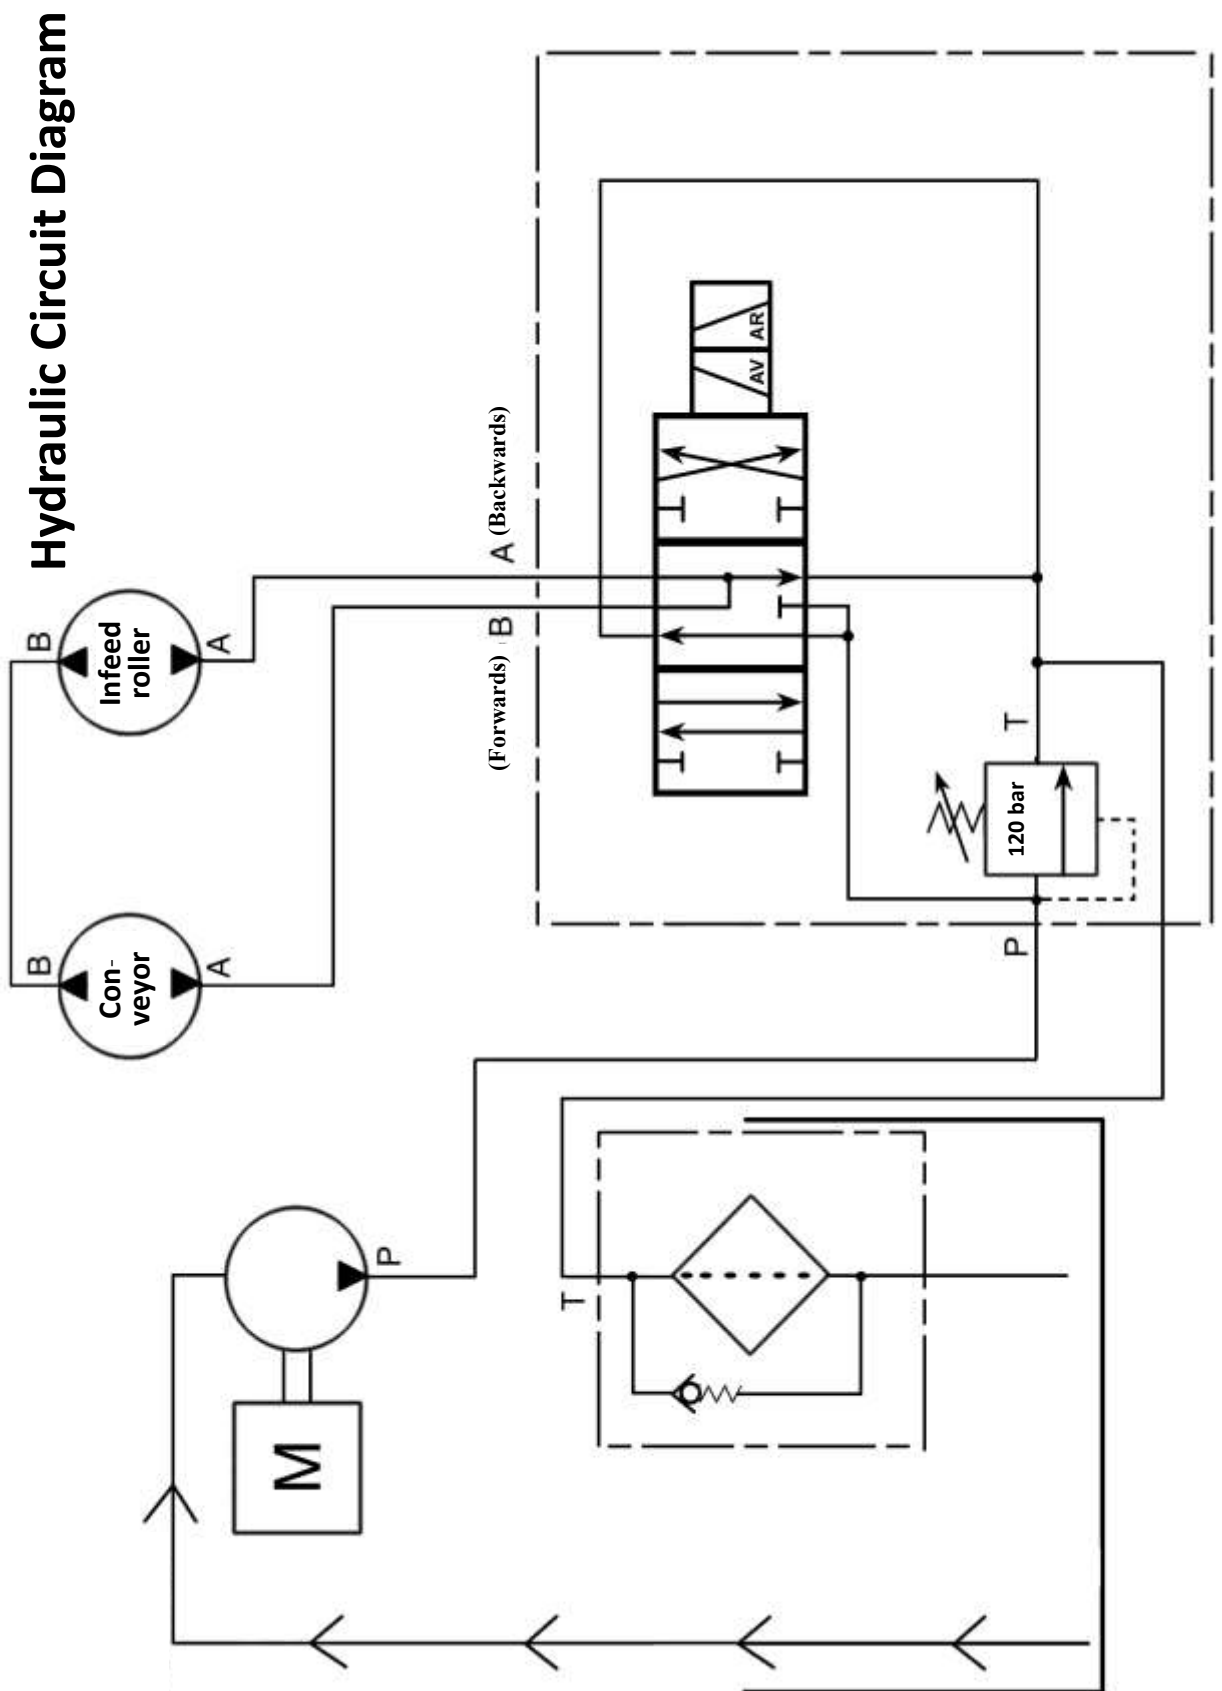








Electric Circuit Diagram machine

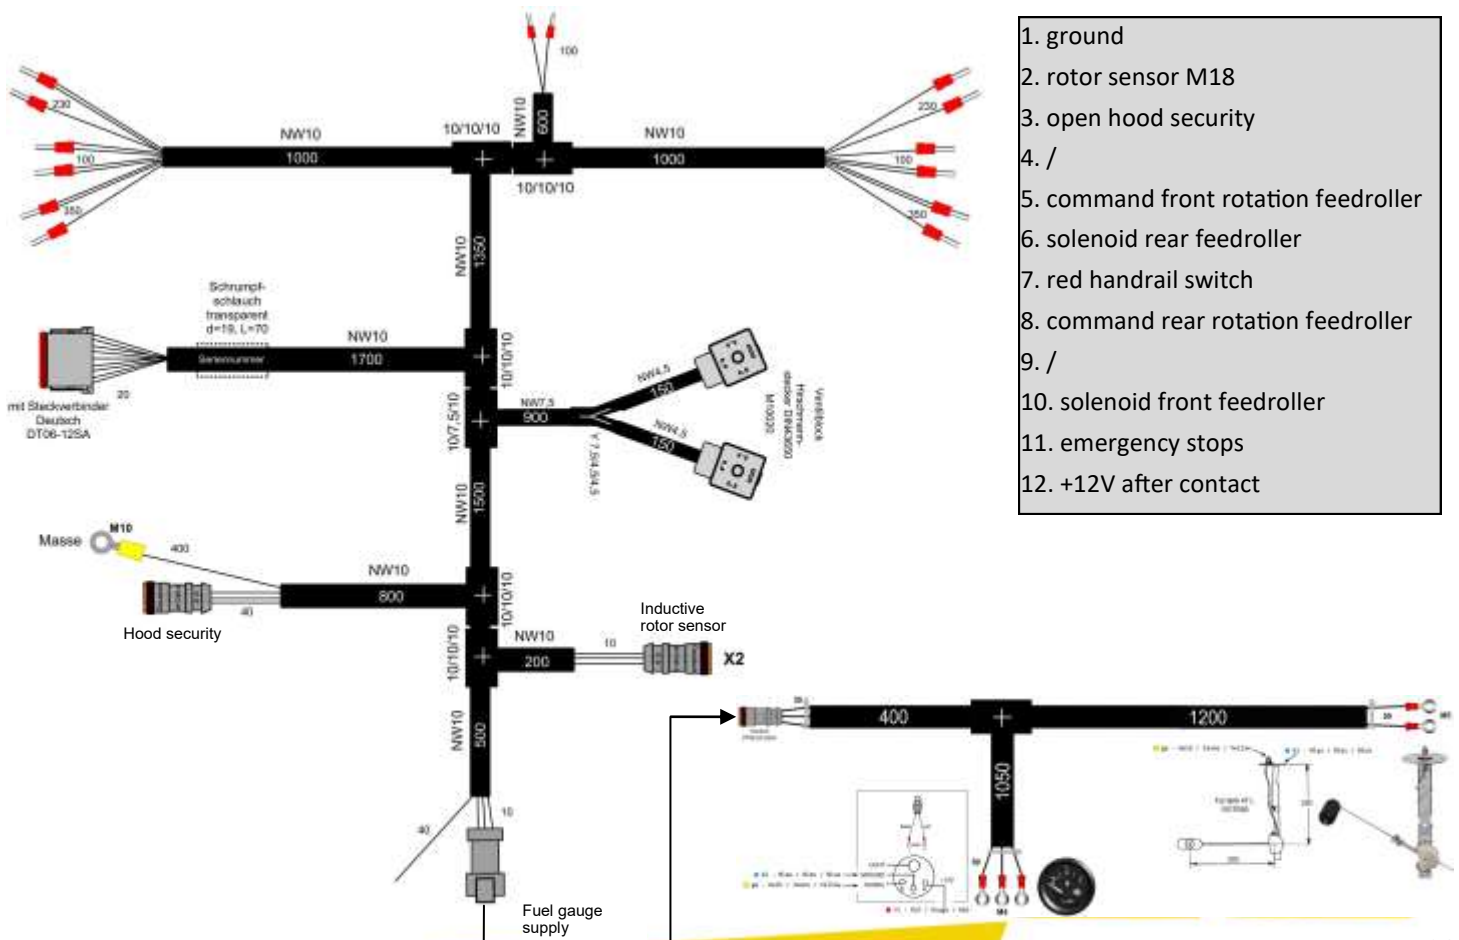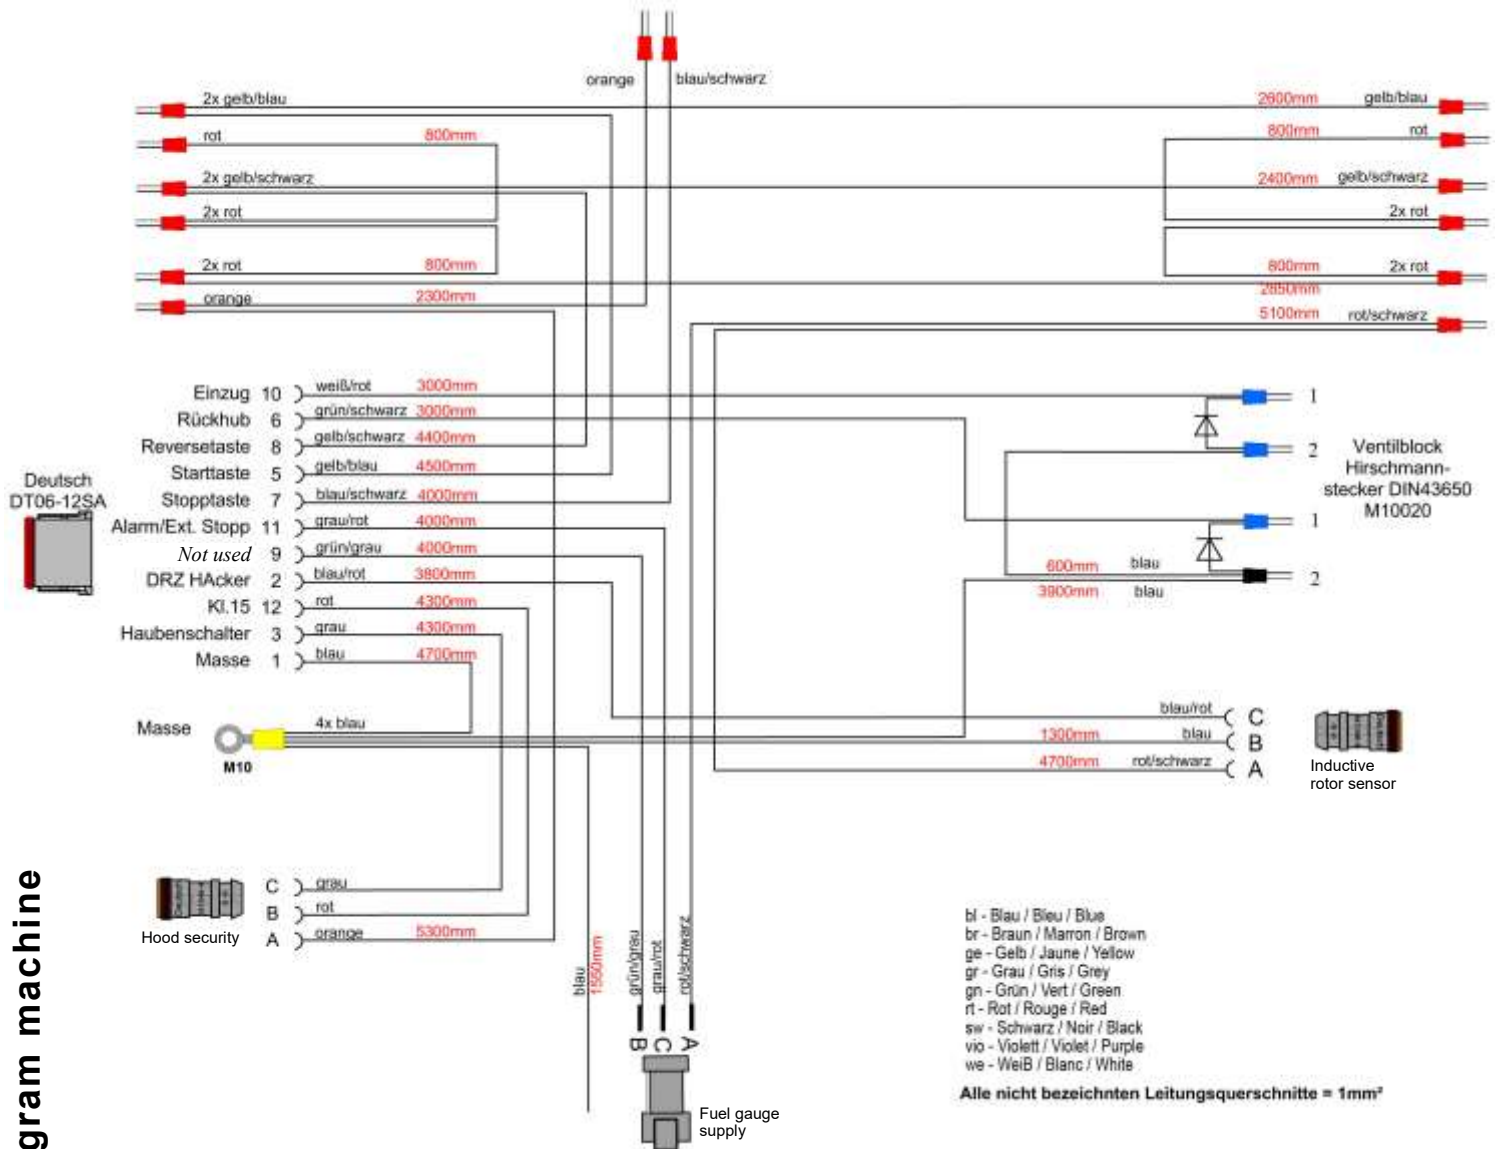

Saelen

3 rue Jules Verne
L'Orée du Golf - BP 17
59790 Ronchin
Tél : + 33 (0)3 20 43 87 87
Fax : +33 (0)3 20 34 12 73
contact@saelen.fr www.salen.Fr

Pièces détachées

Tél : + 33 (0)3 20 43 24 89
Fax : +33 (0)3 20 34 12 73

TS Industrie

TS Industrie GmbH
Weserstr. 2
D - 47506 Neukirchen - Vluyn (Germany)
Tel.: +49 2845 / 9292-0
Fax: +49 2845 / 9292-28
kontakt@ts-industrie.de
